 
 
 
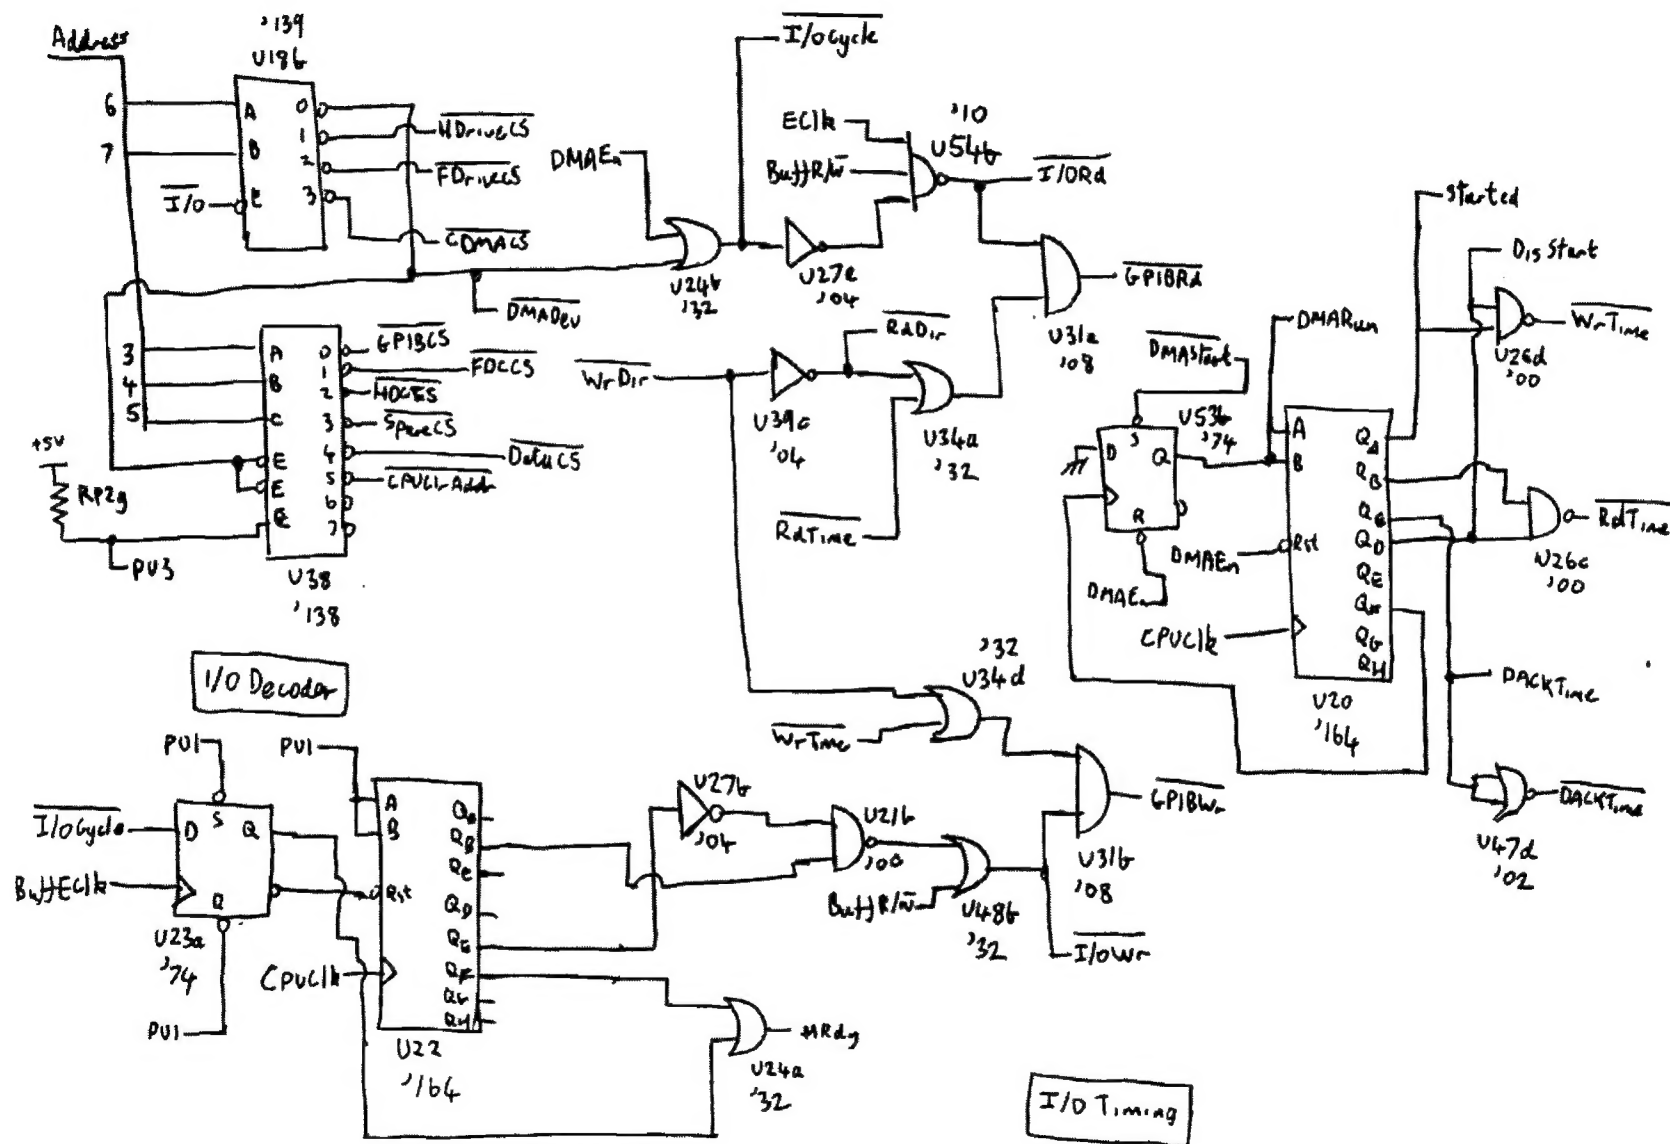 
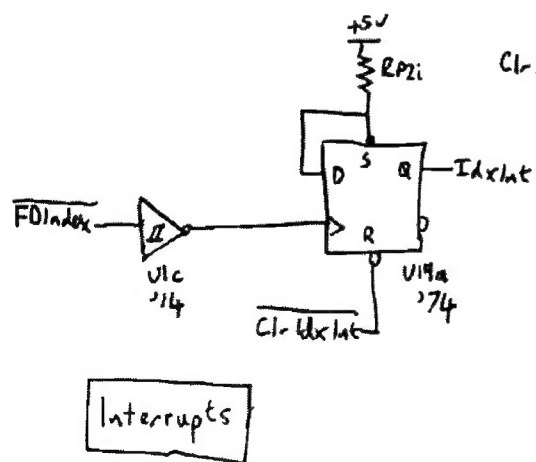 



HP18 Port


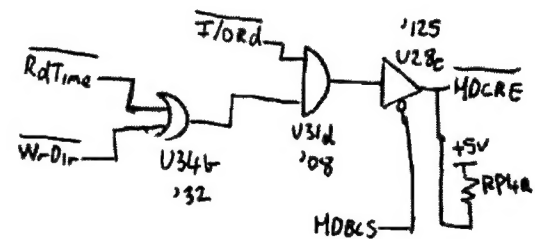


    
MP9133 Controller Slot (4)

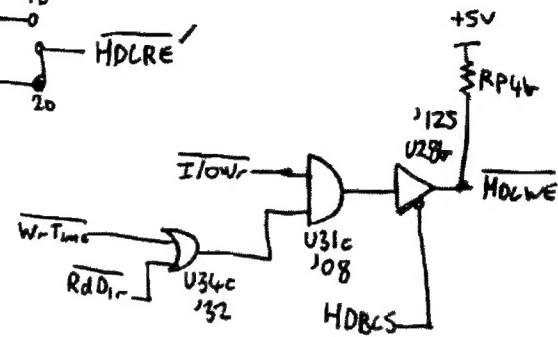 


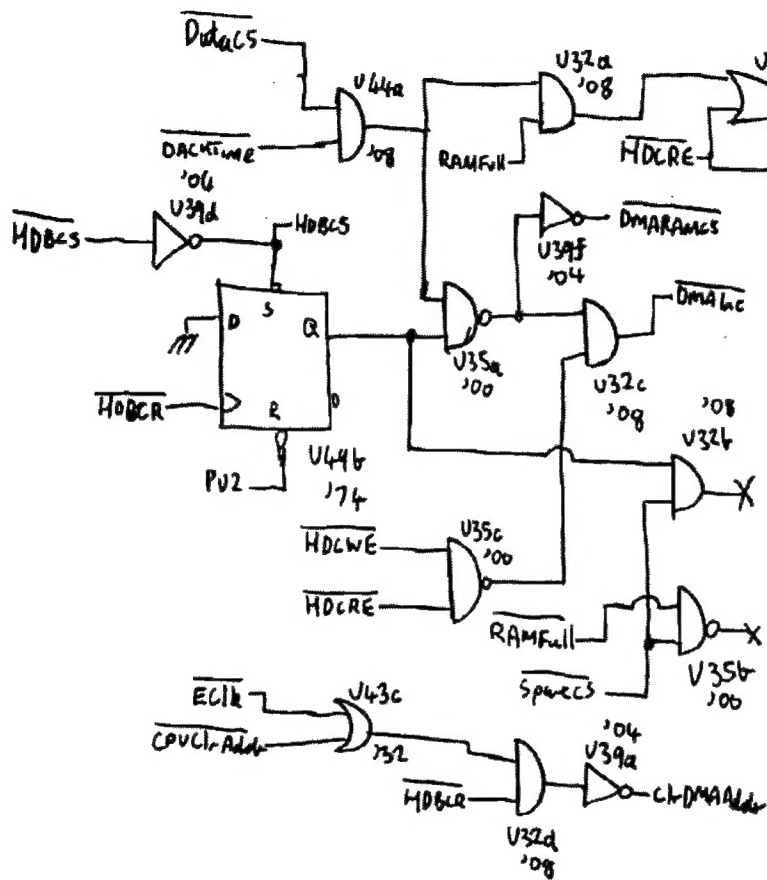 


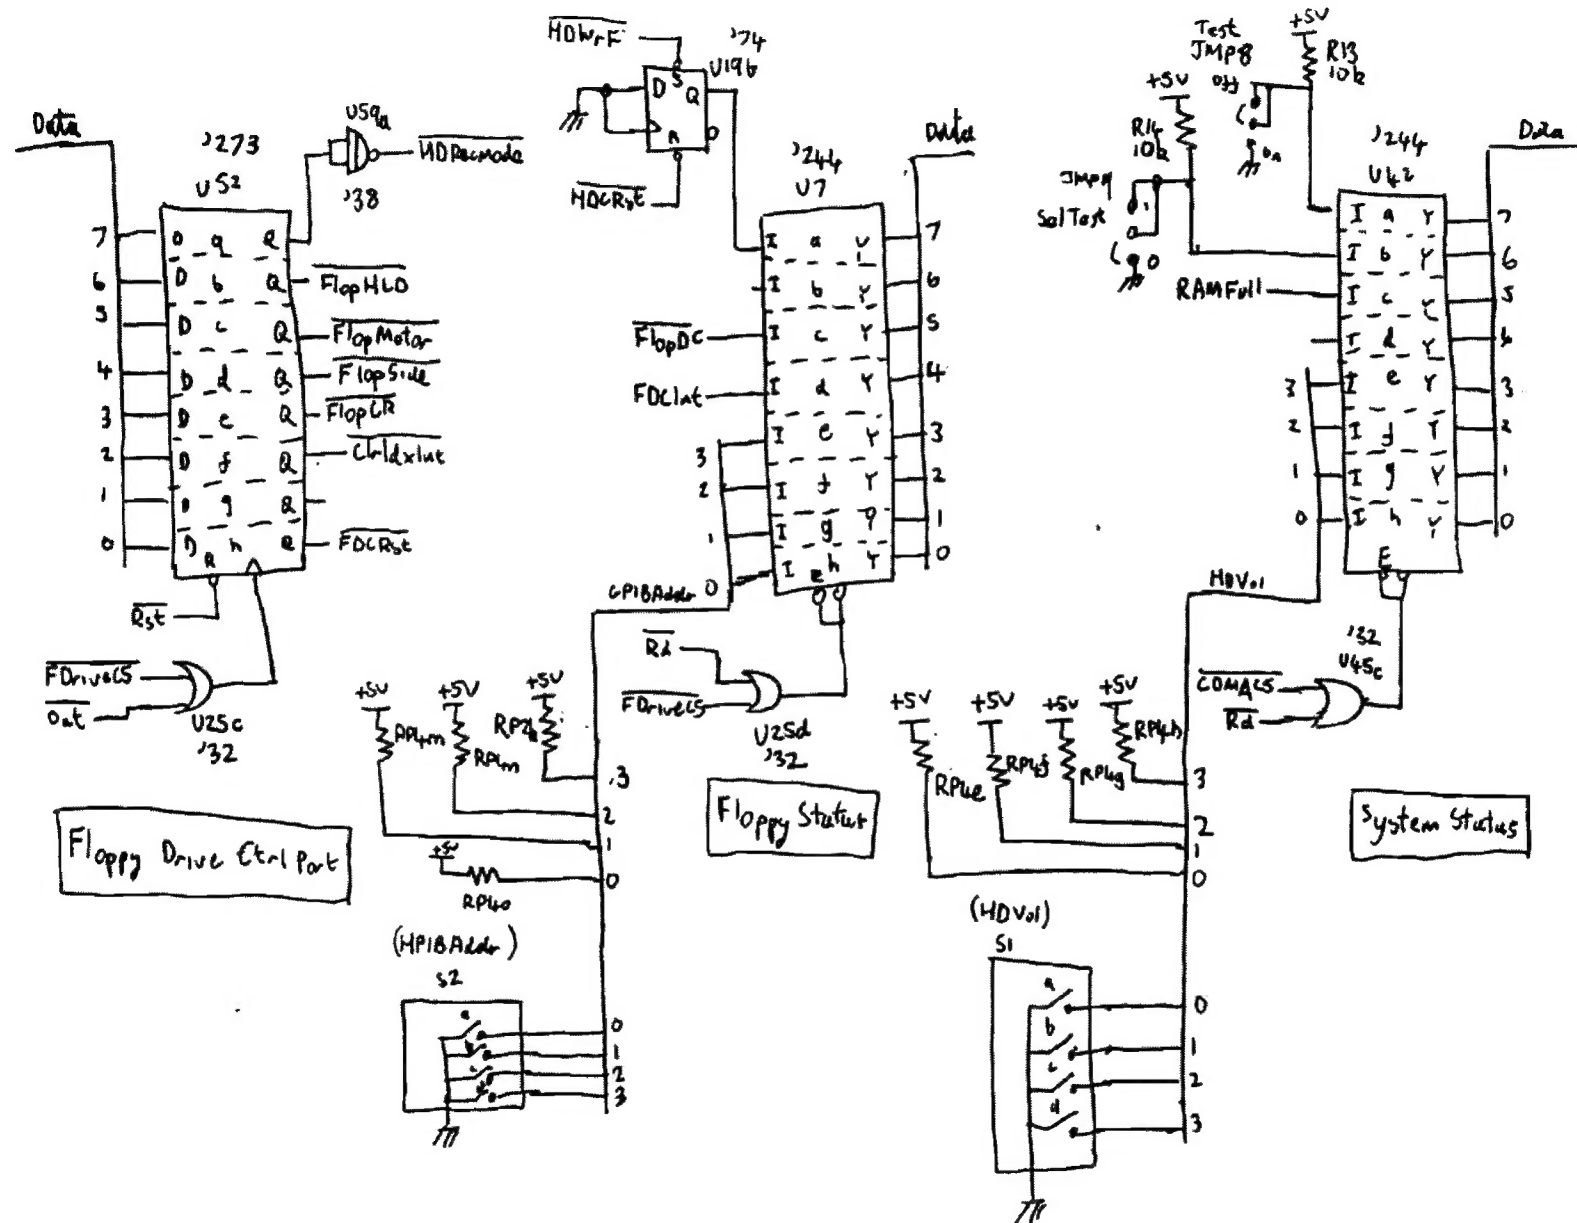

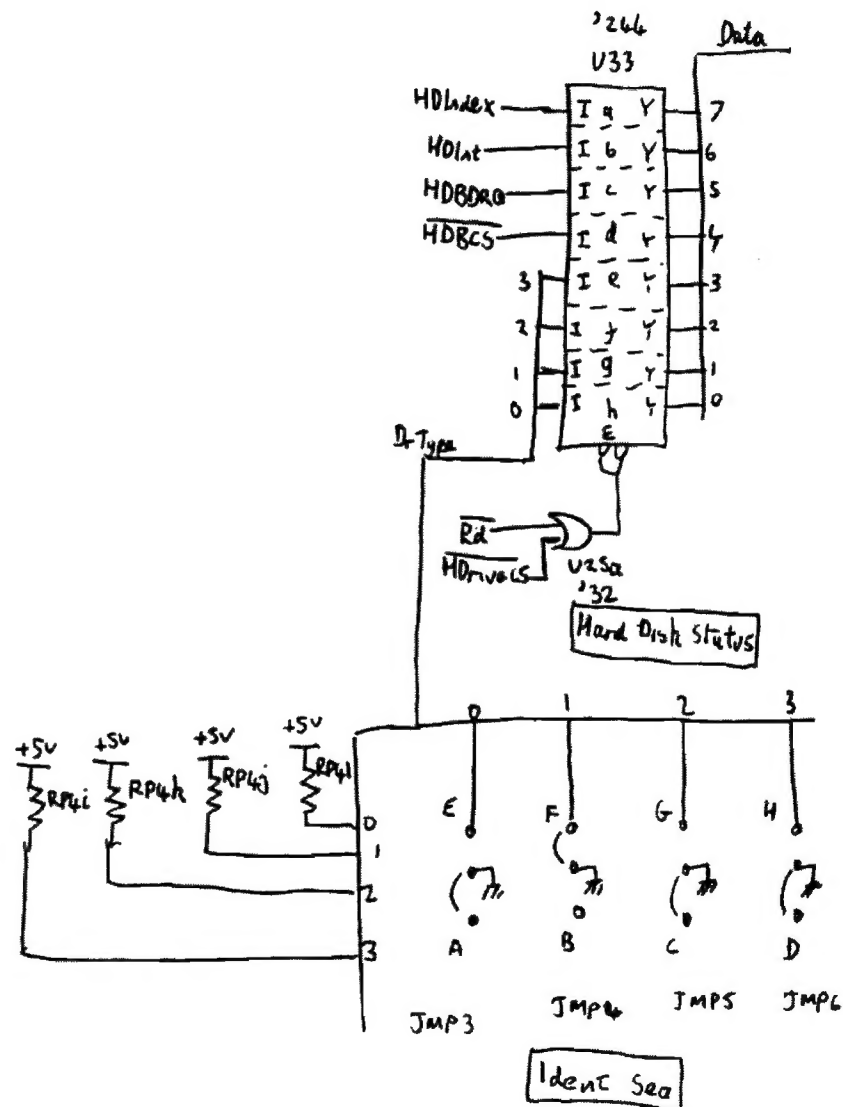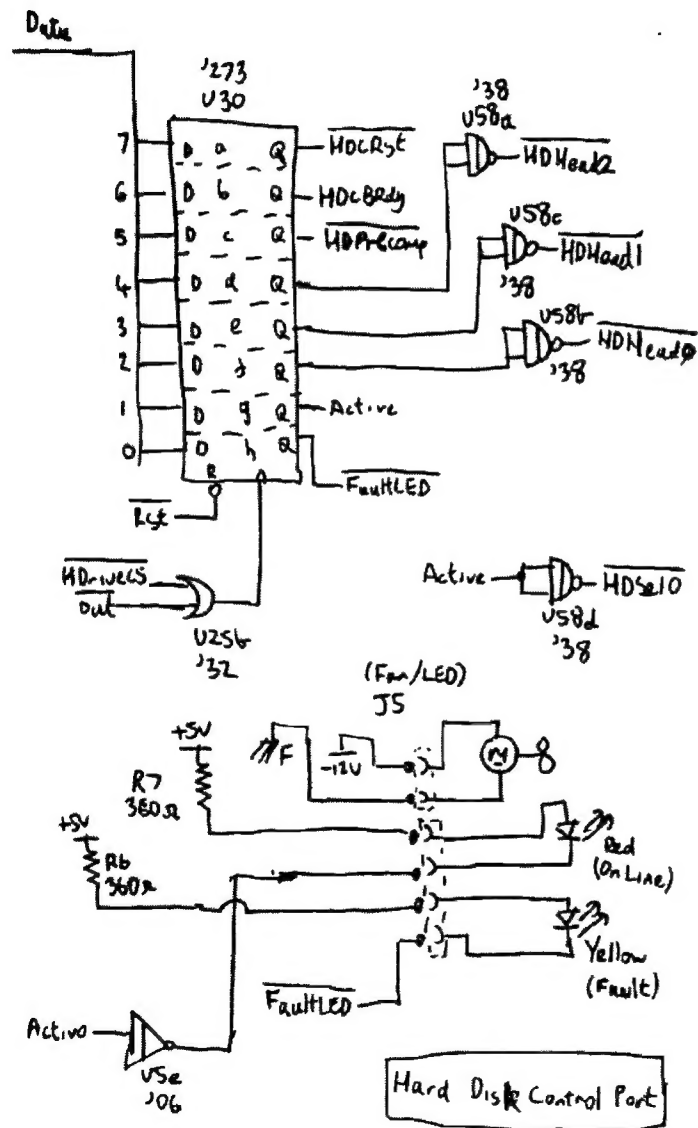


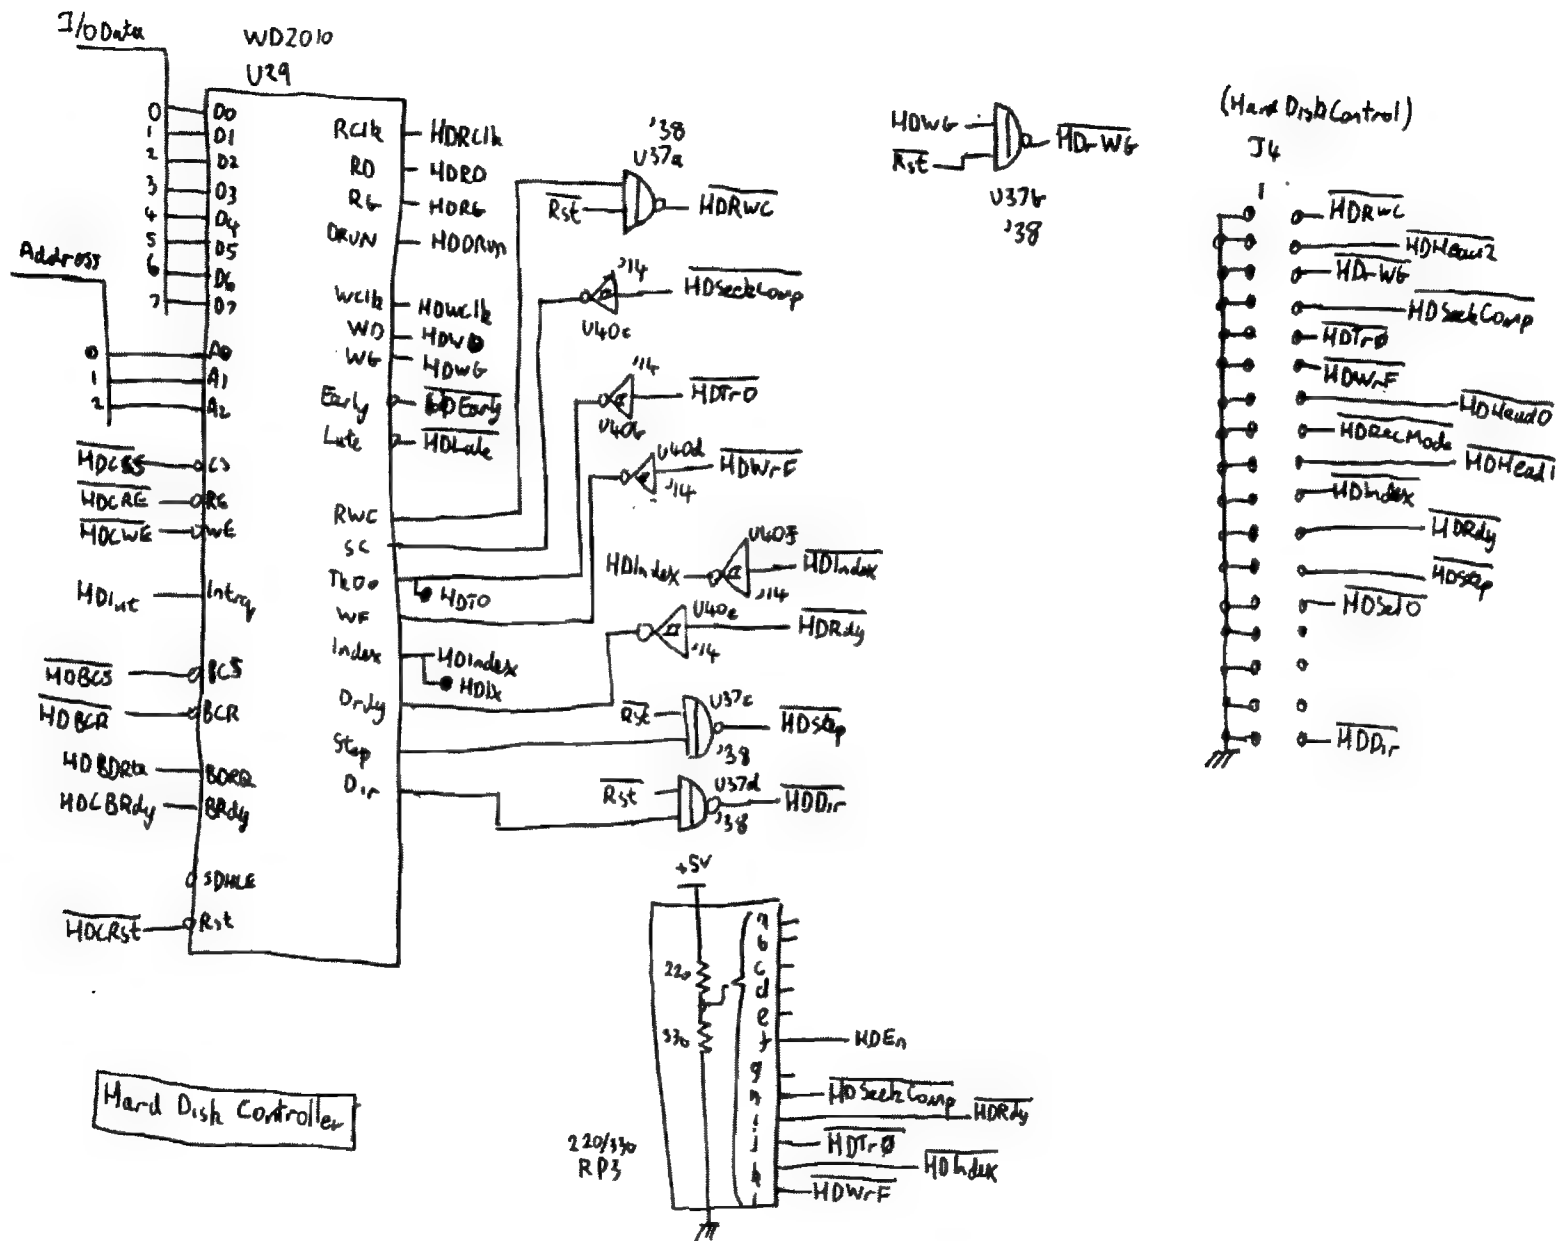

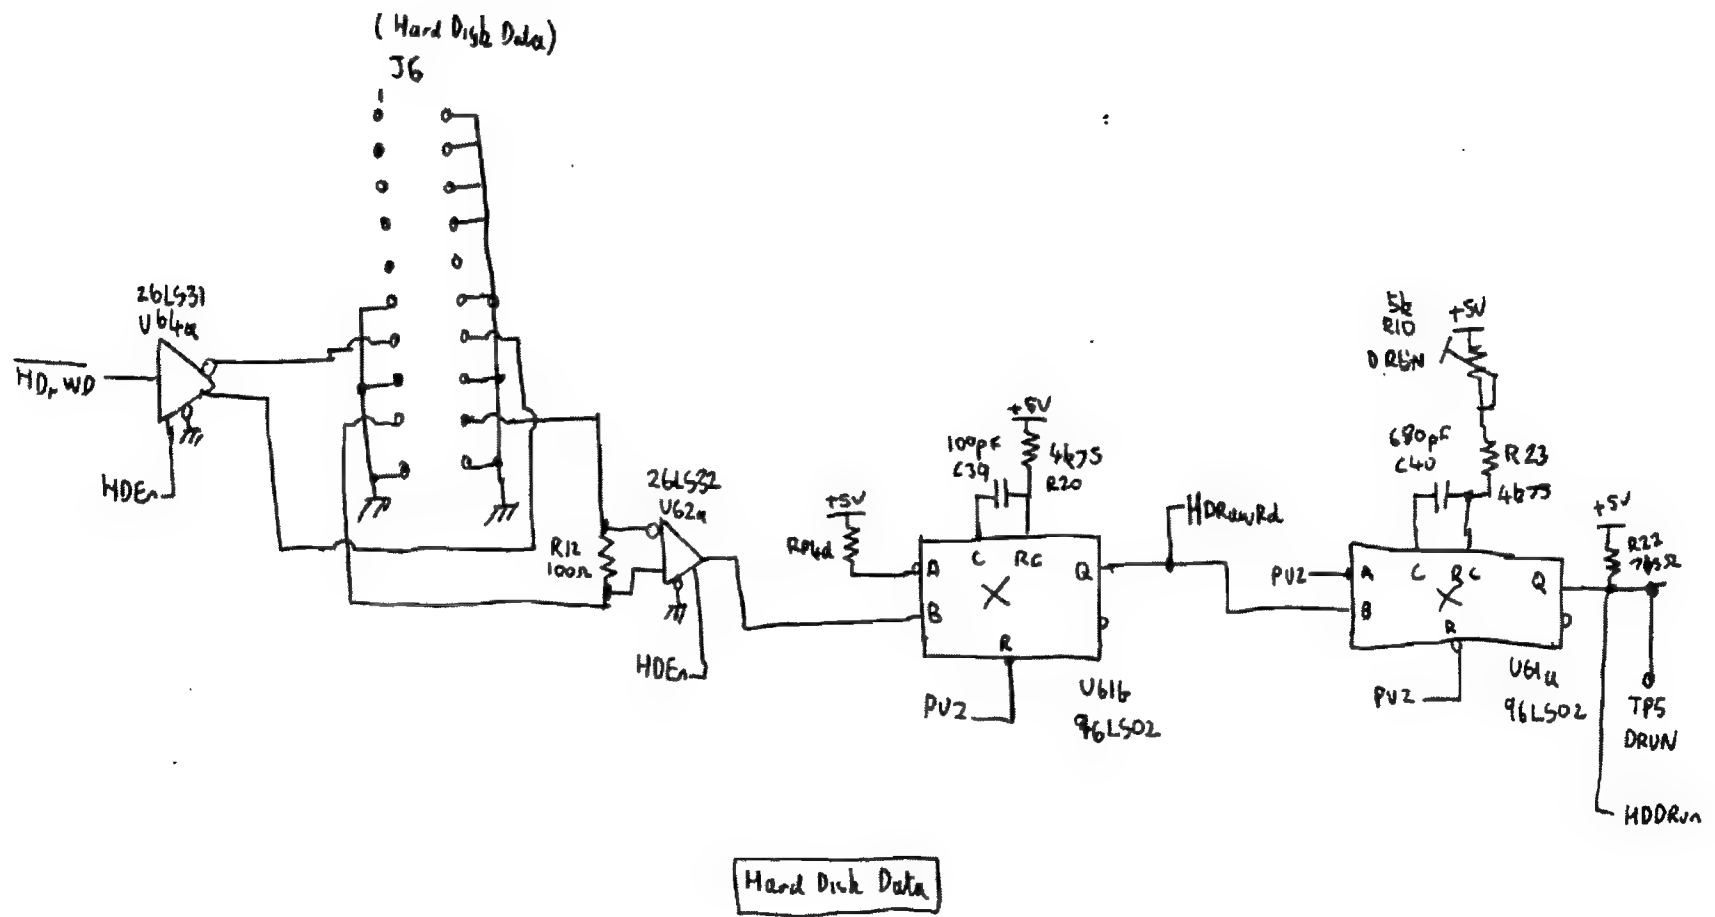

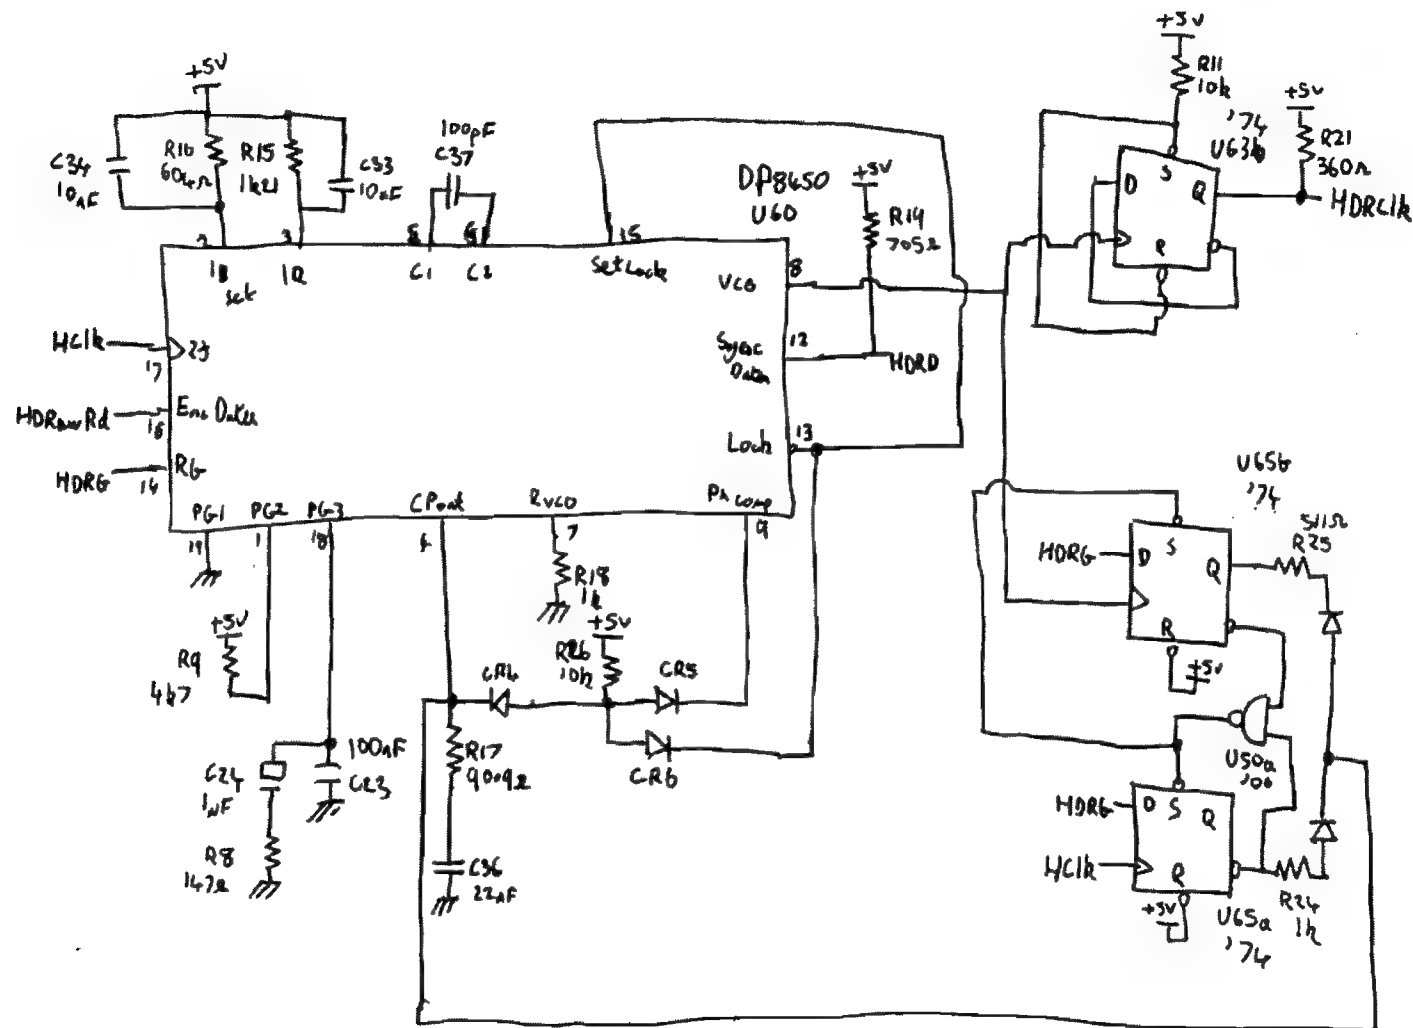


Read Clock

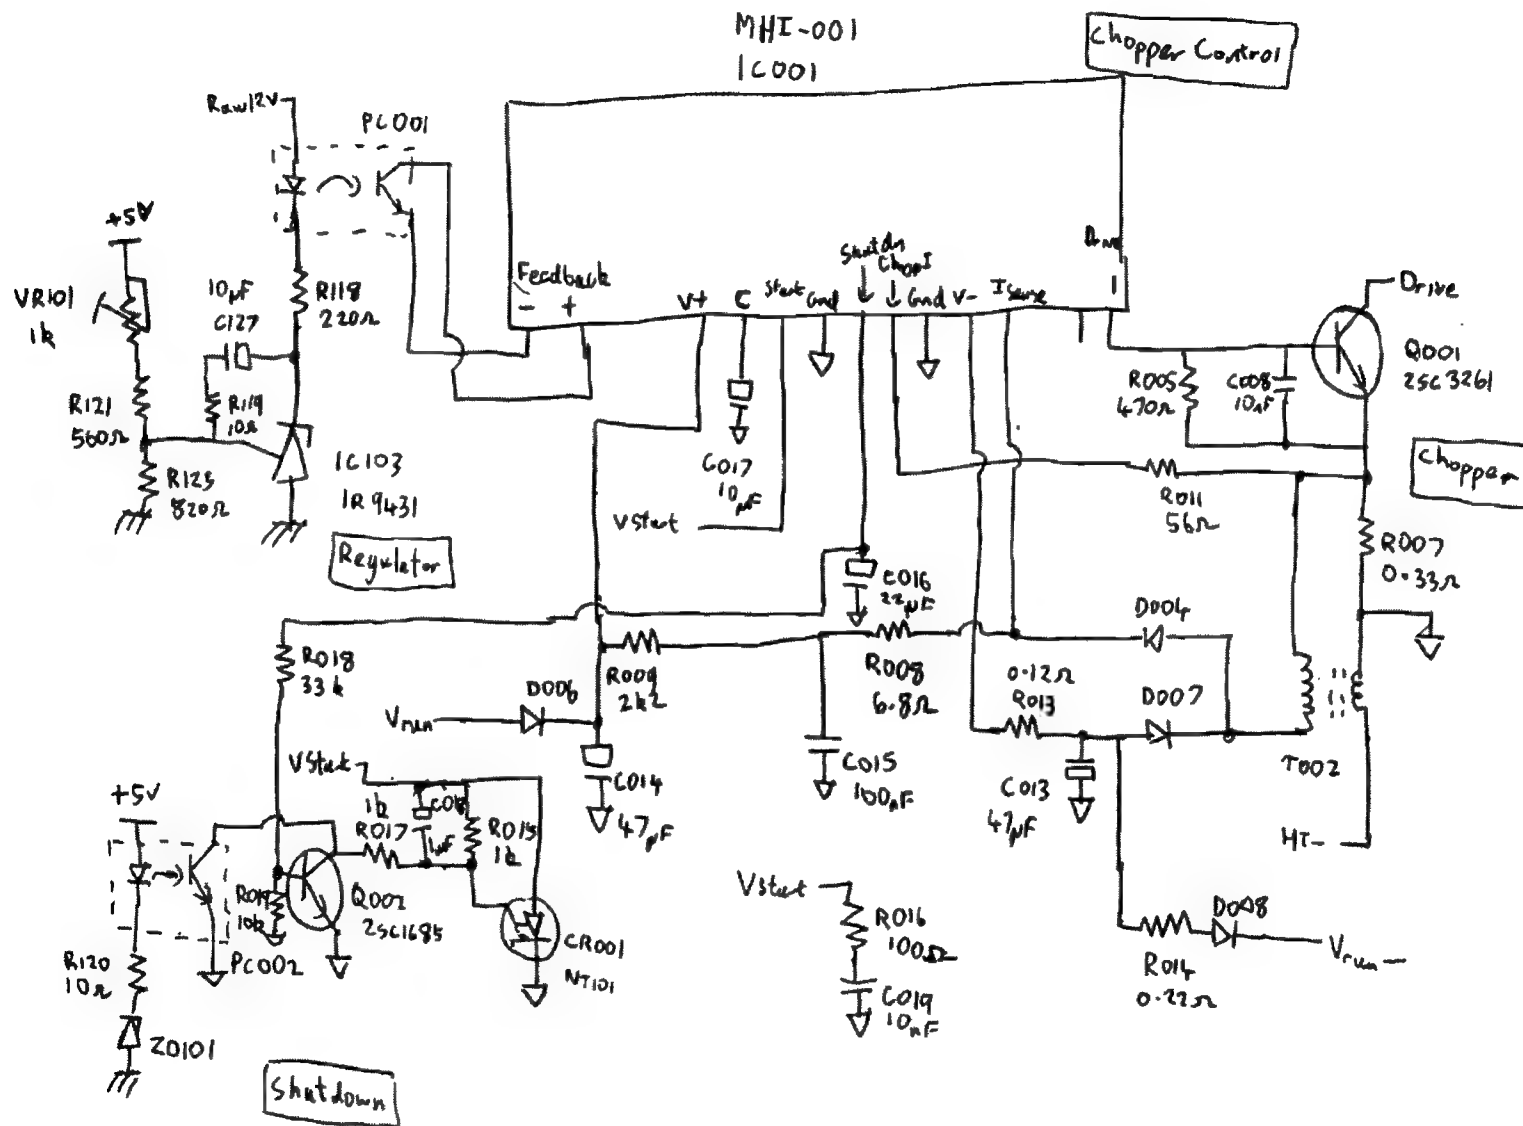 


ETX-390D8M




 
MP9133 PSU sheet(2)

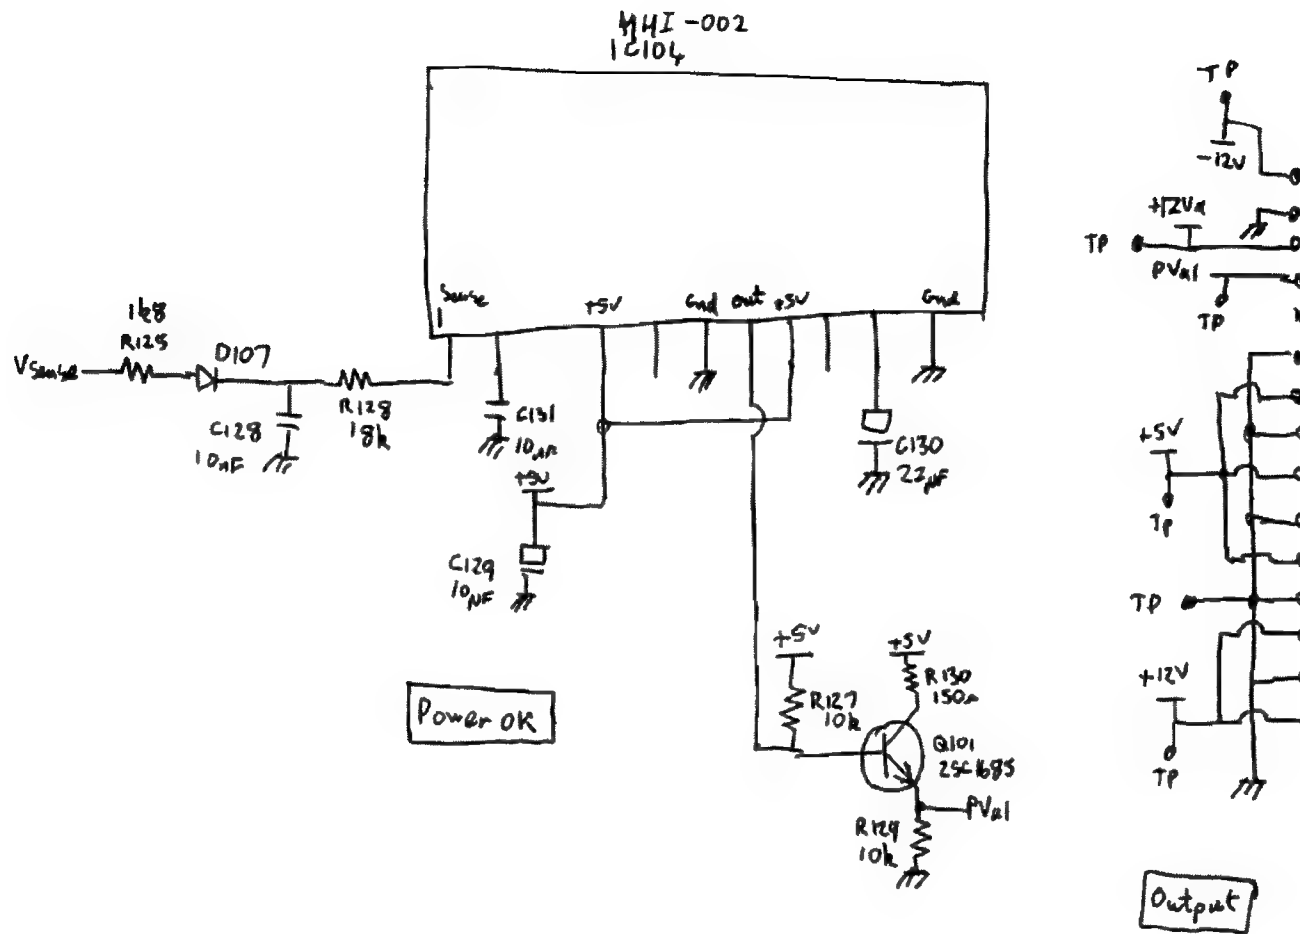


ETX-390D8M
HP 9133 PSU Sheet (4)

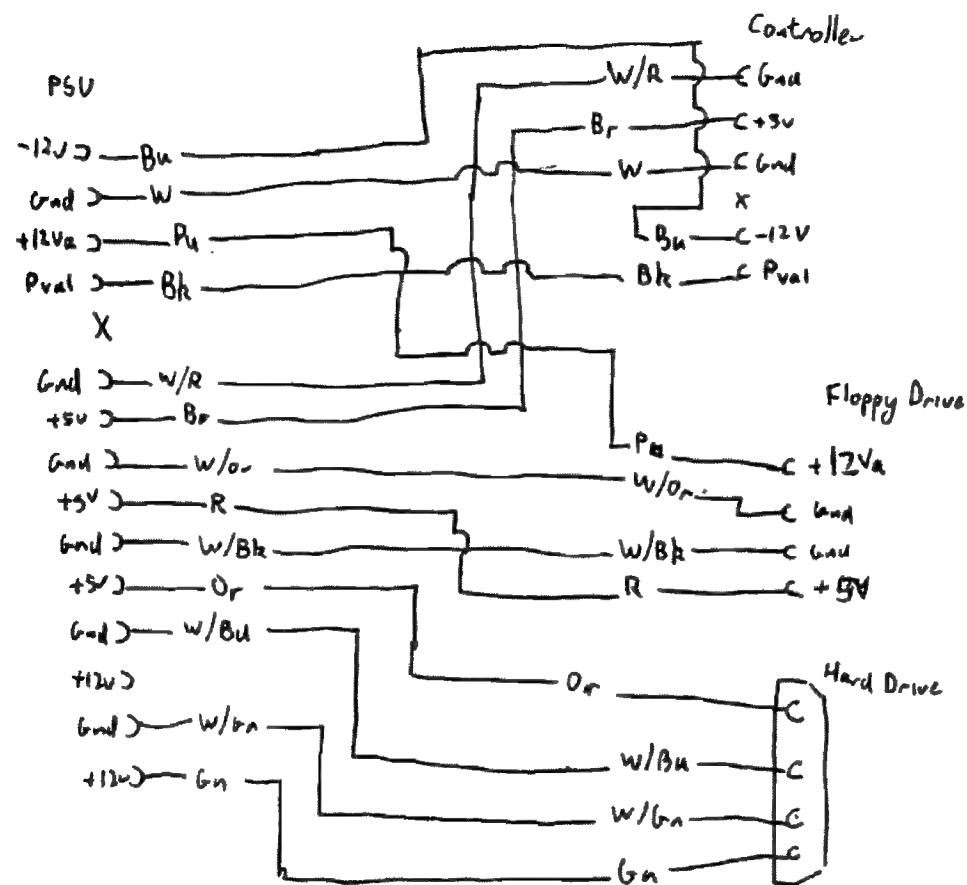 


HP9133 Power cable

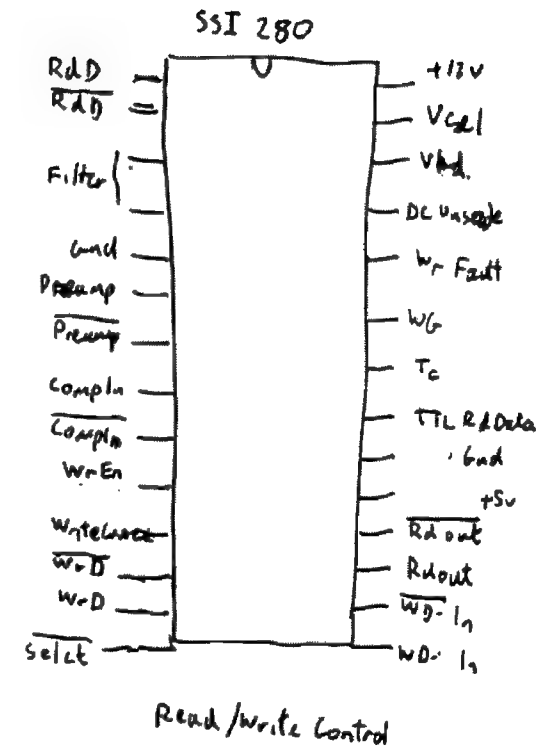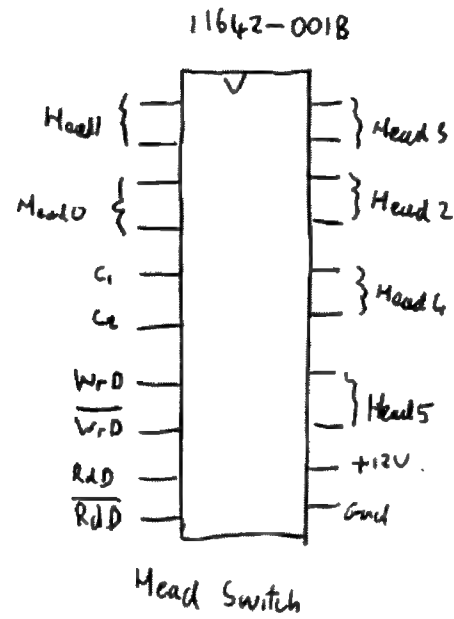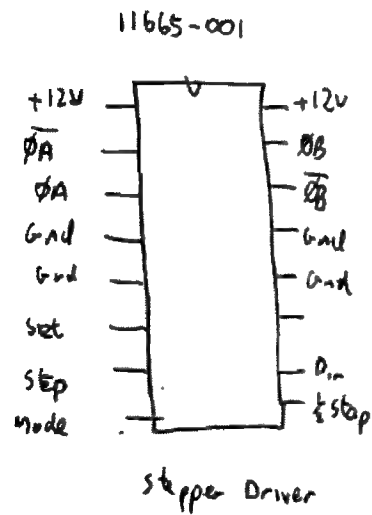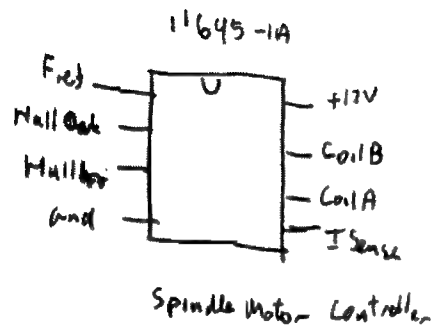    


ST 225 ICs

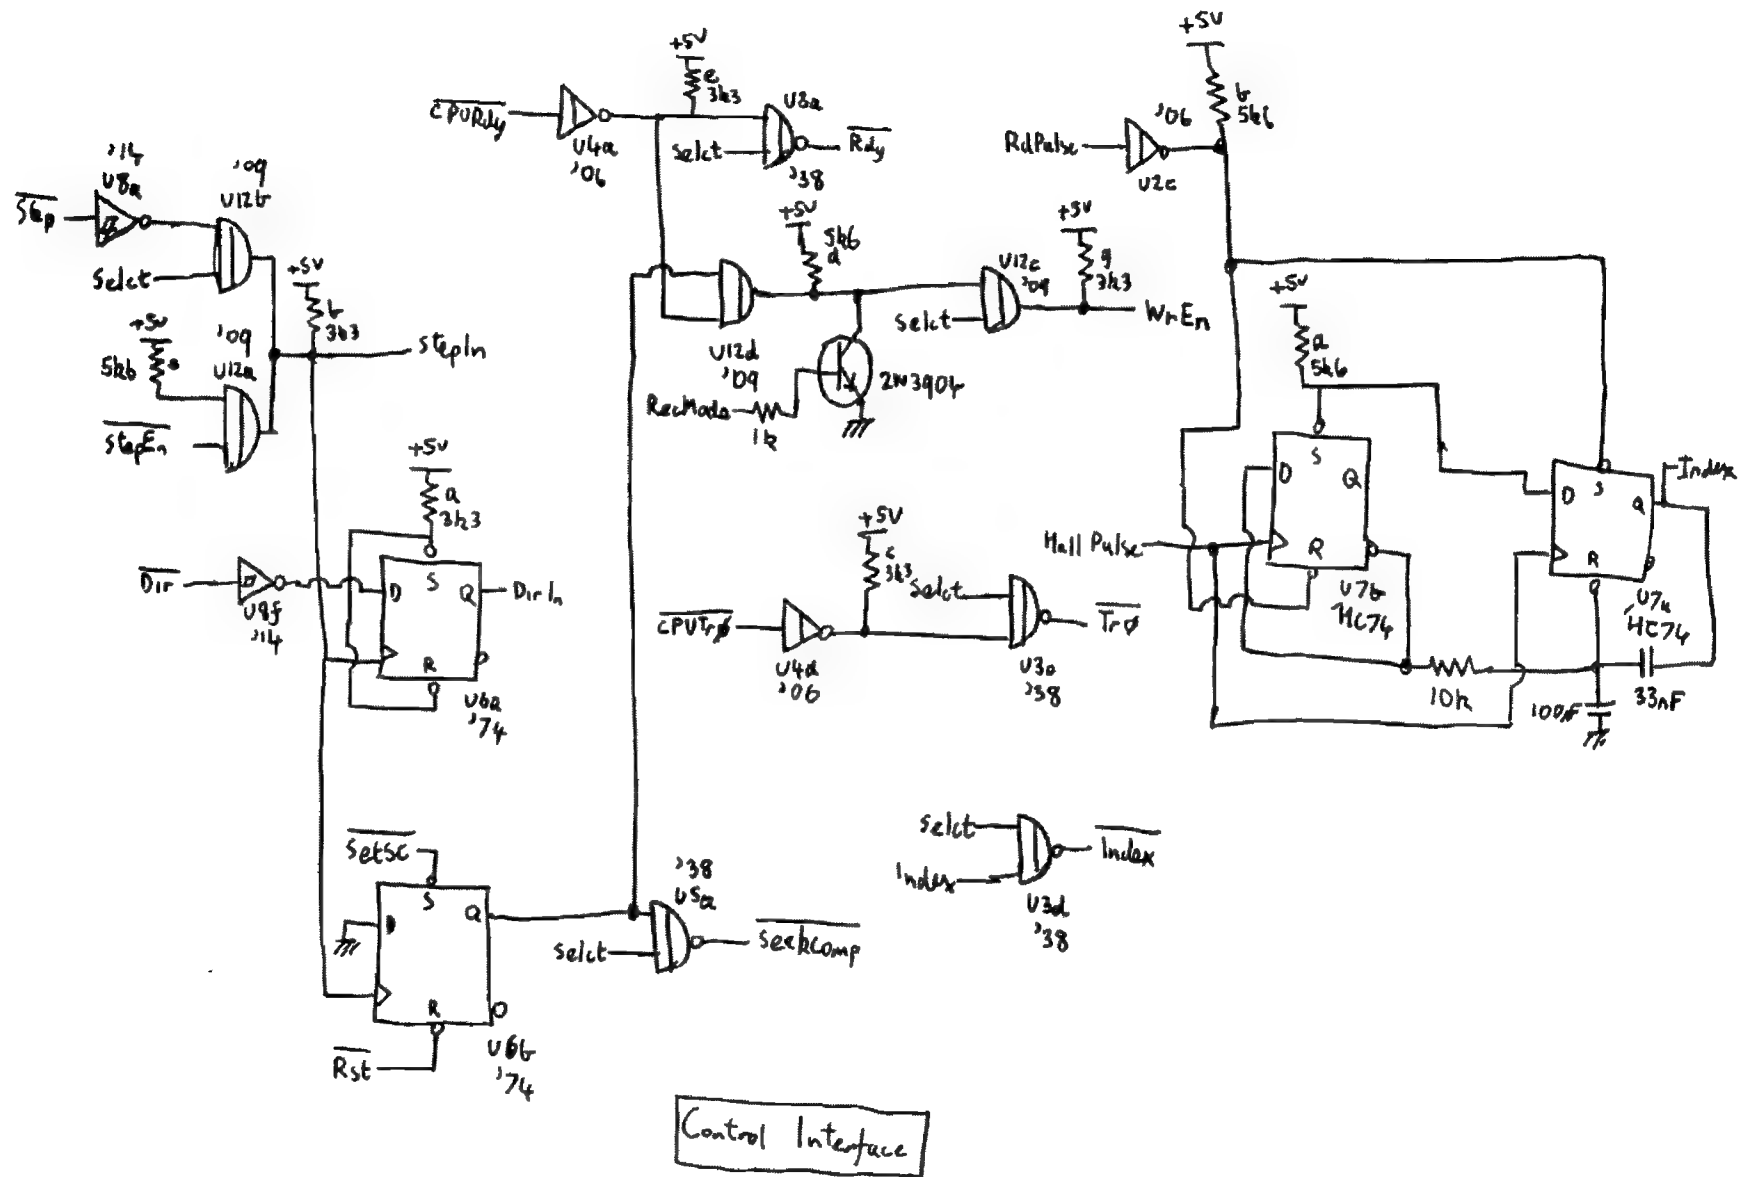 



ST225 Slot(3)

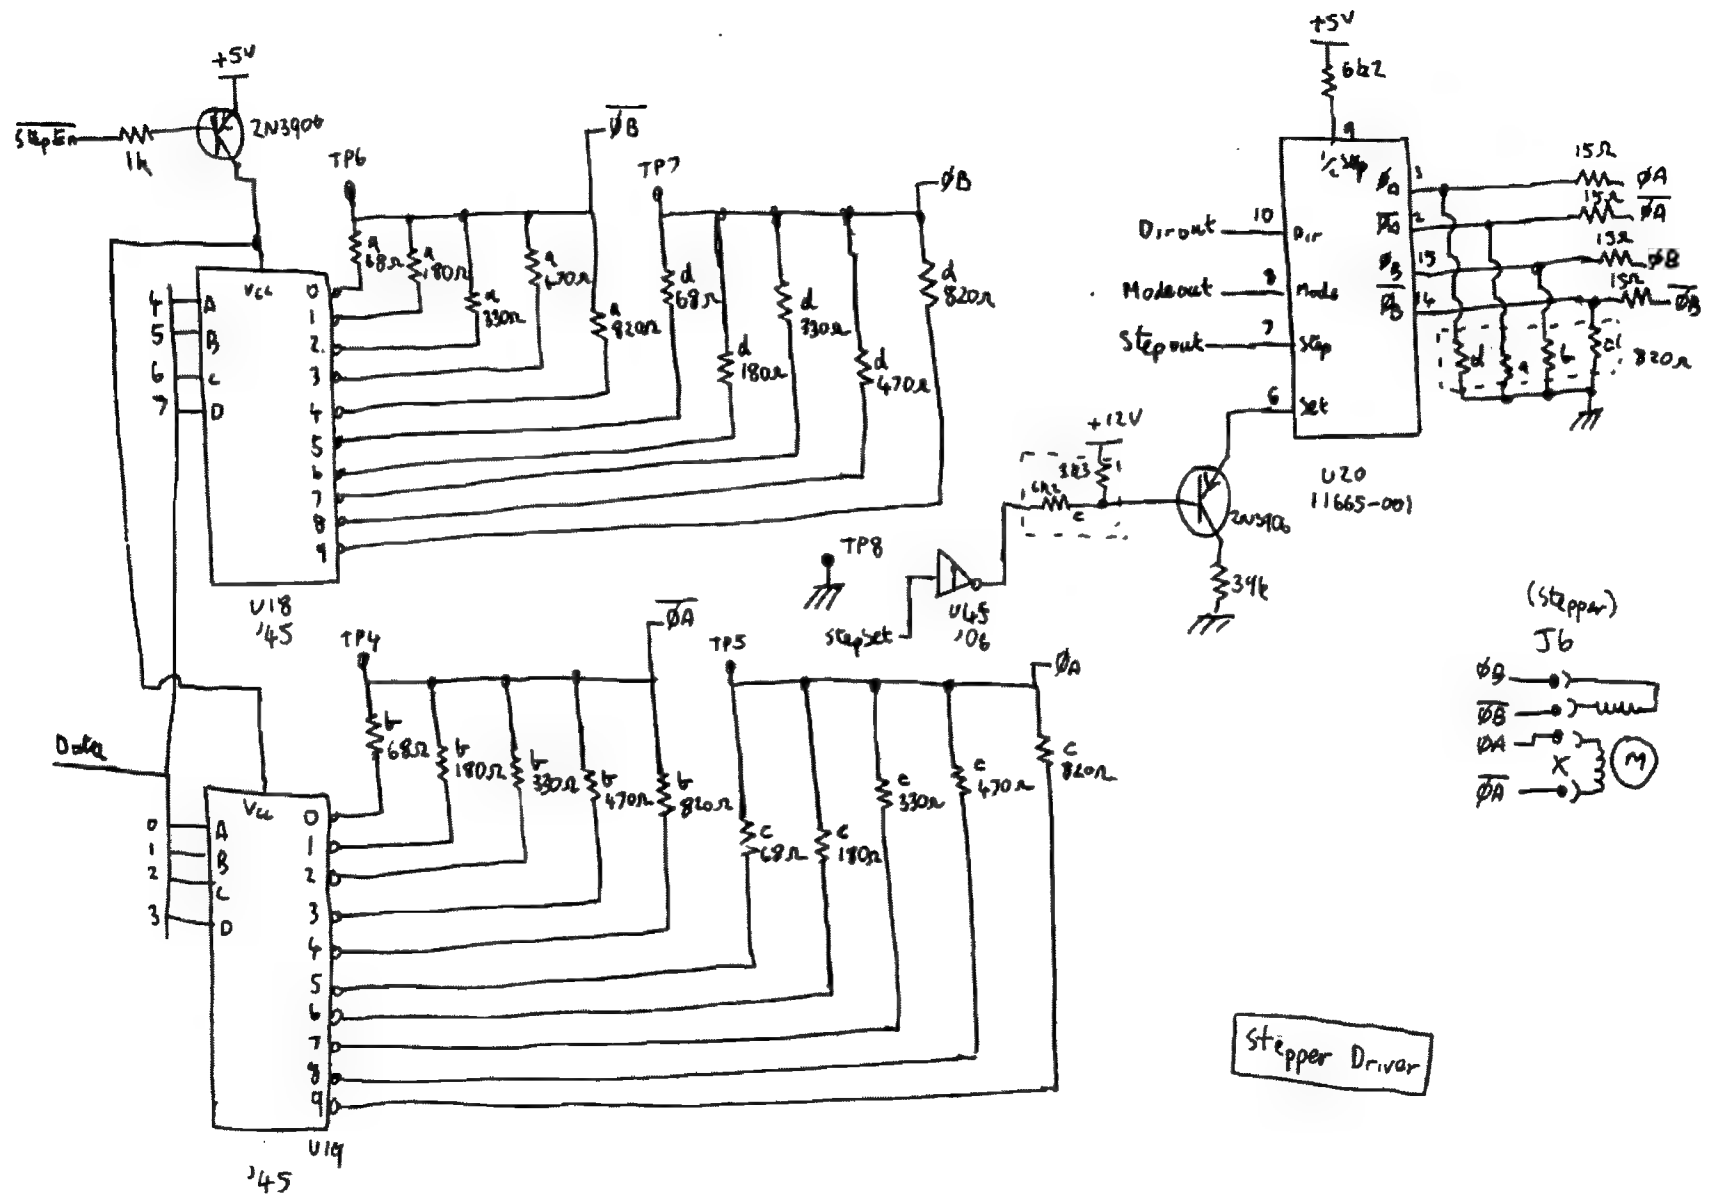 


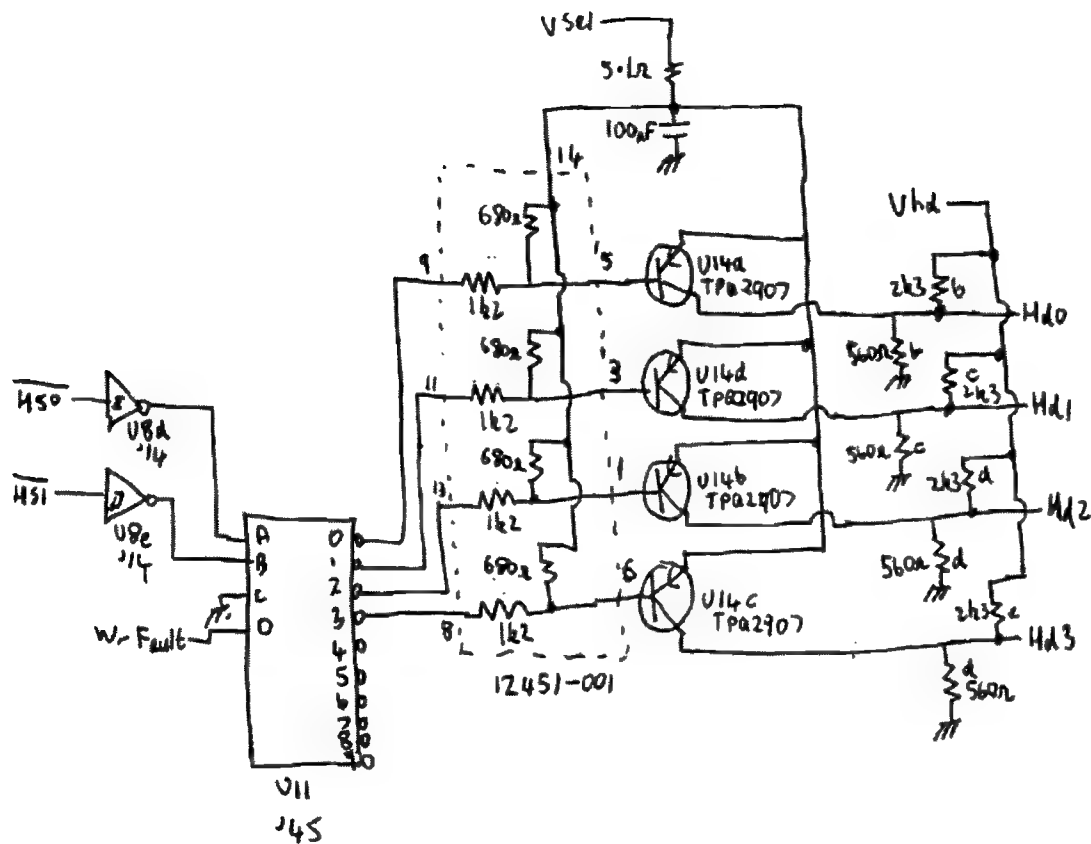 


Head Switch

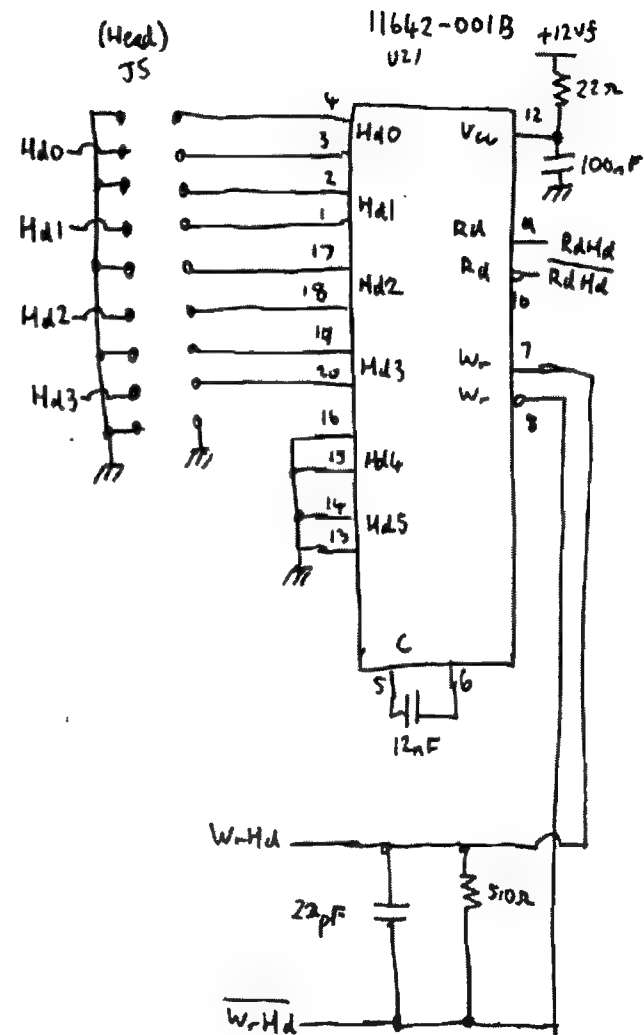 


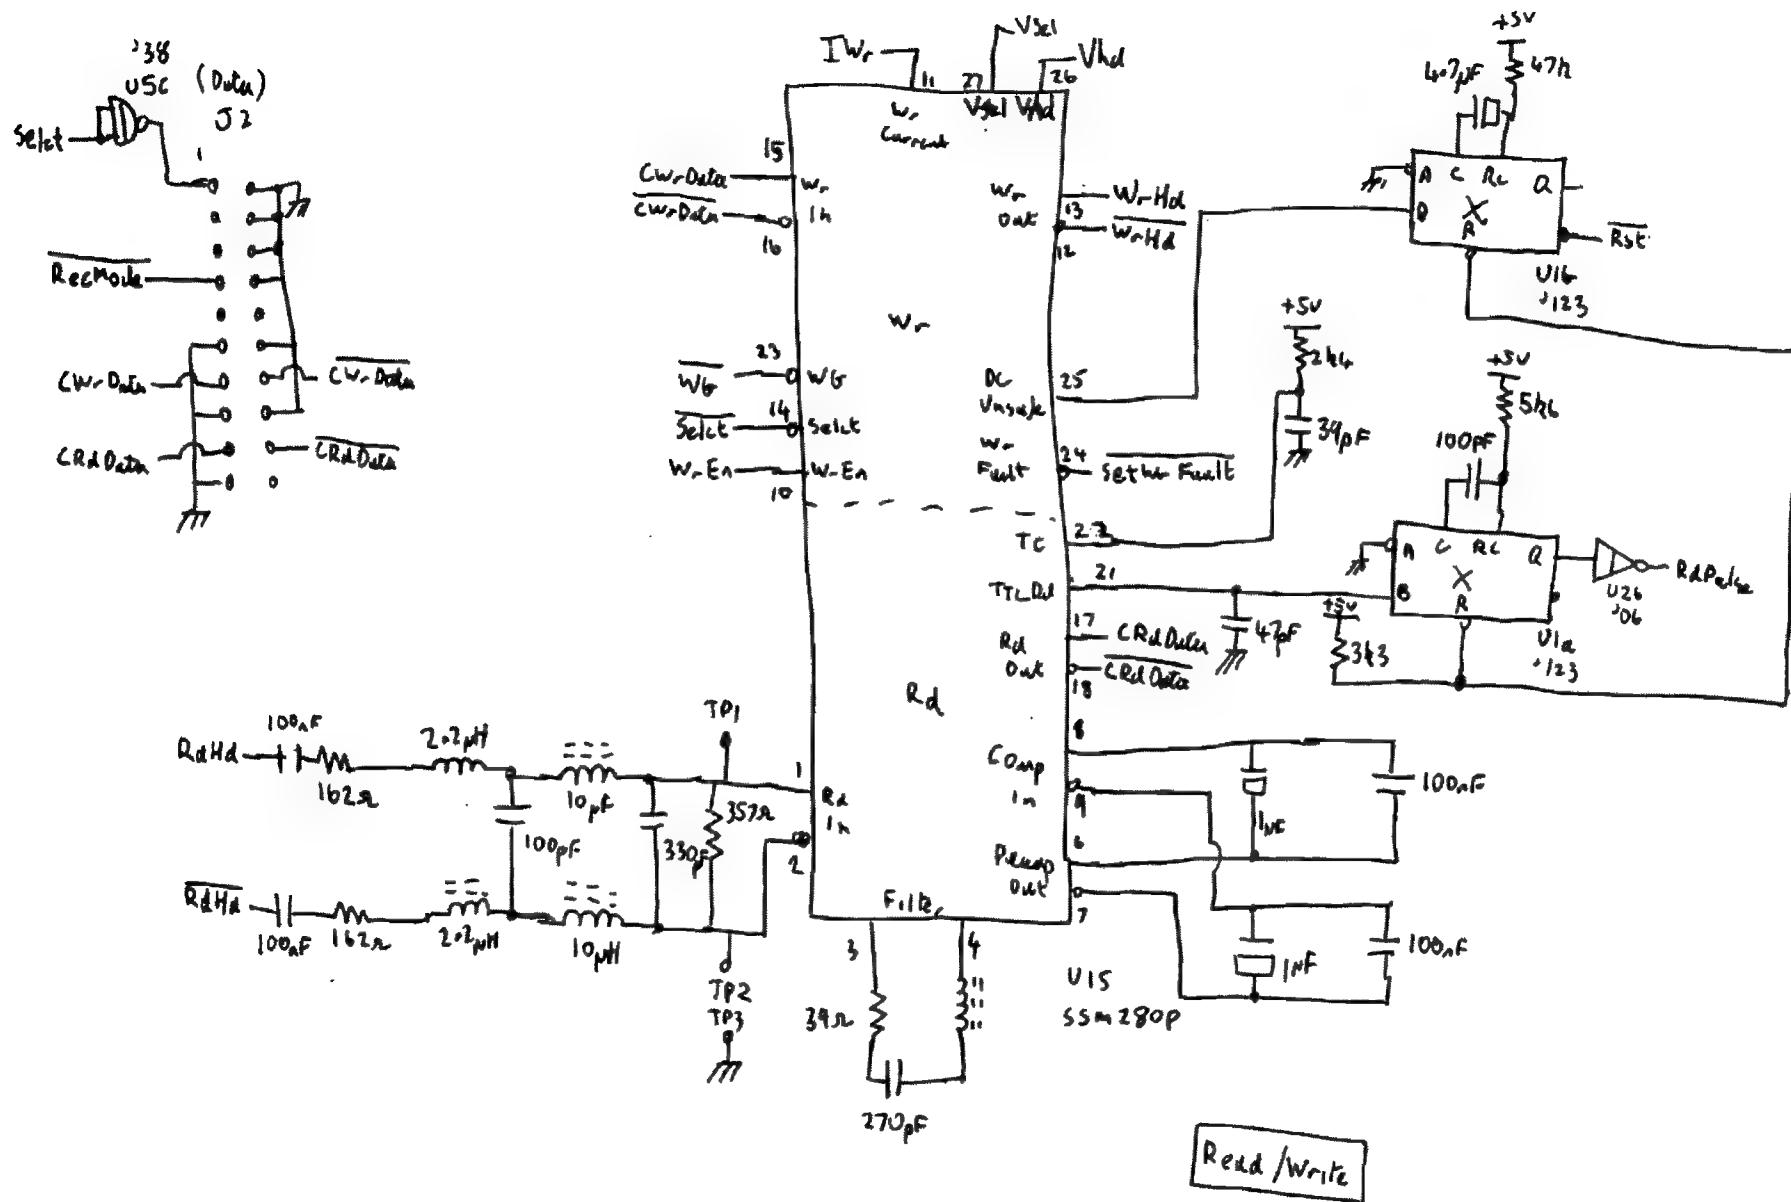 

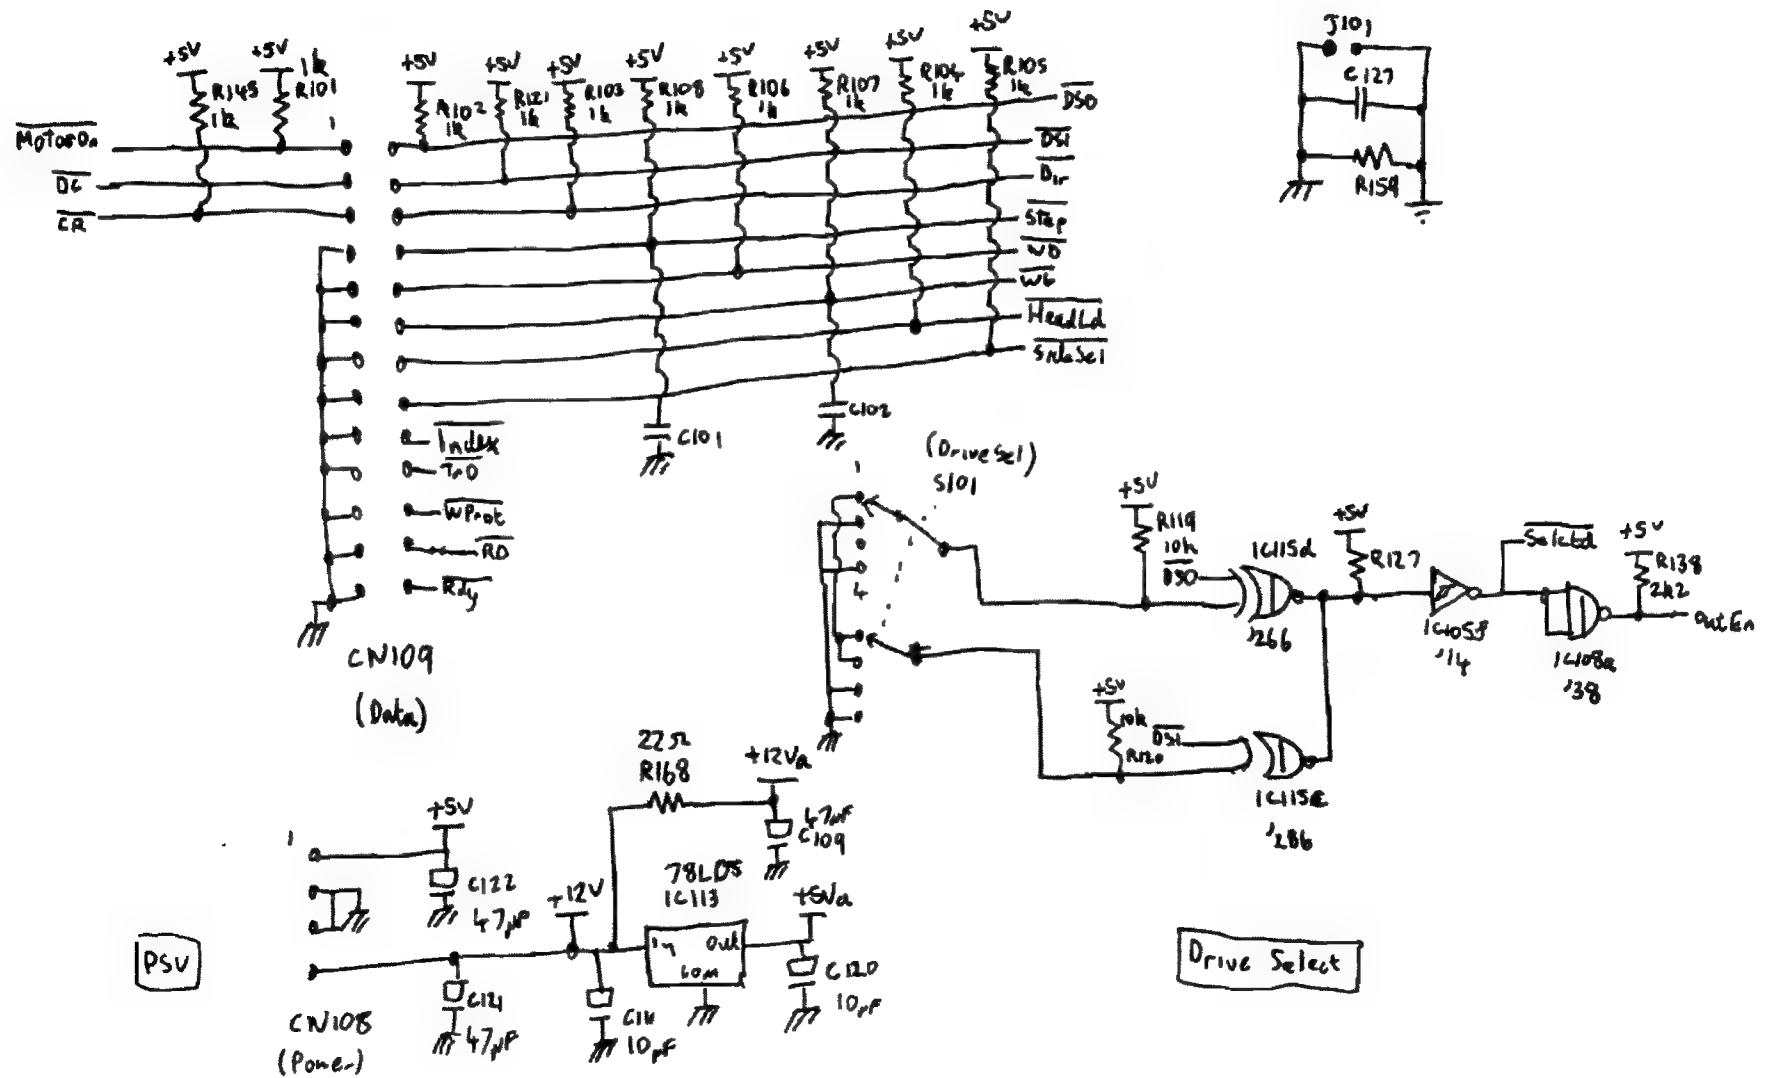 


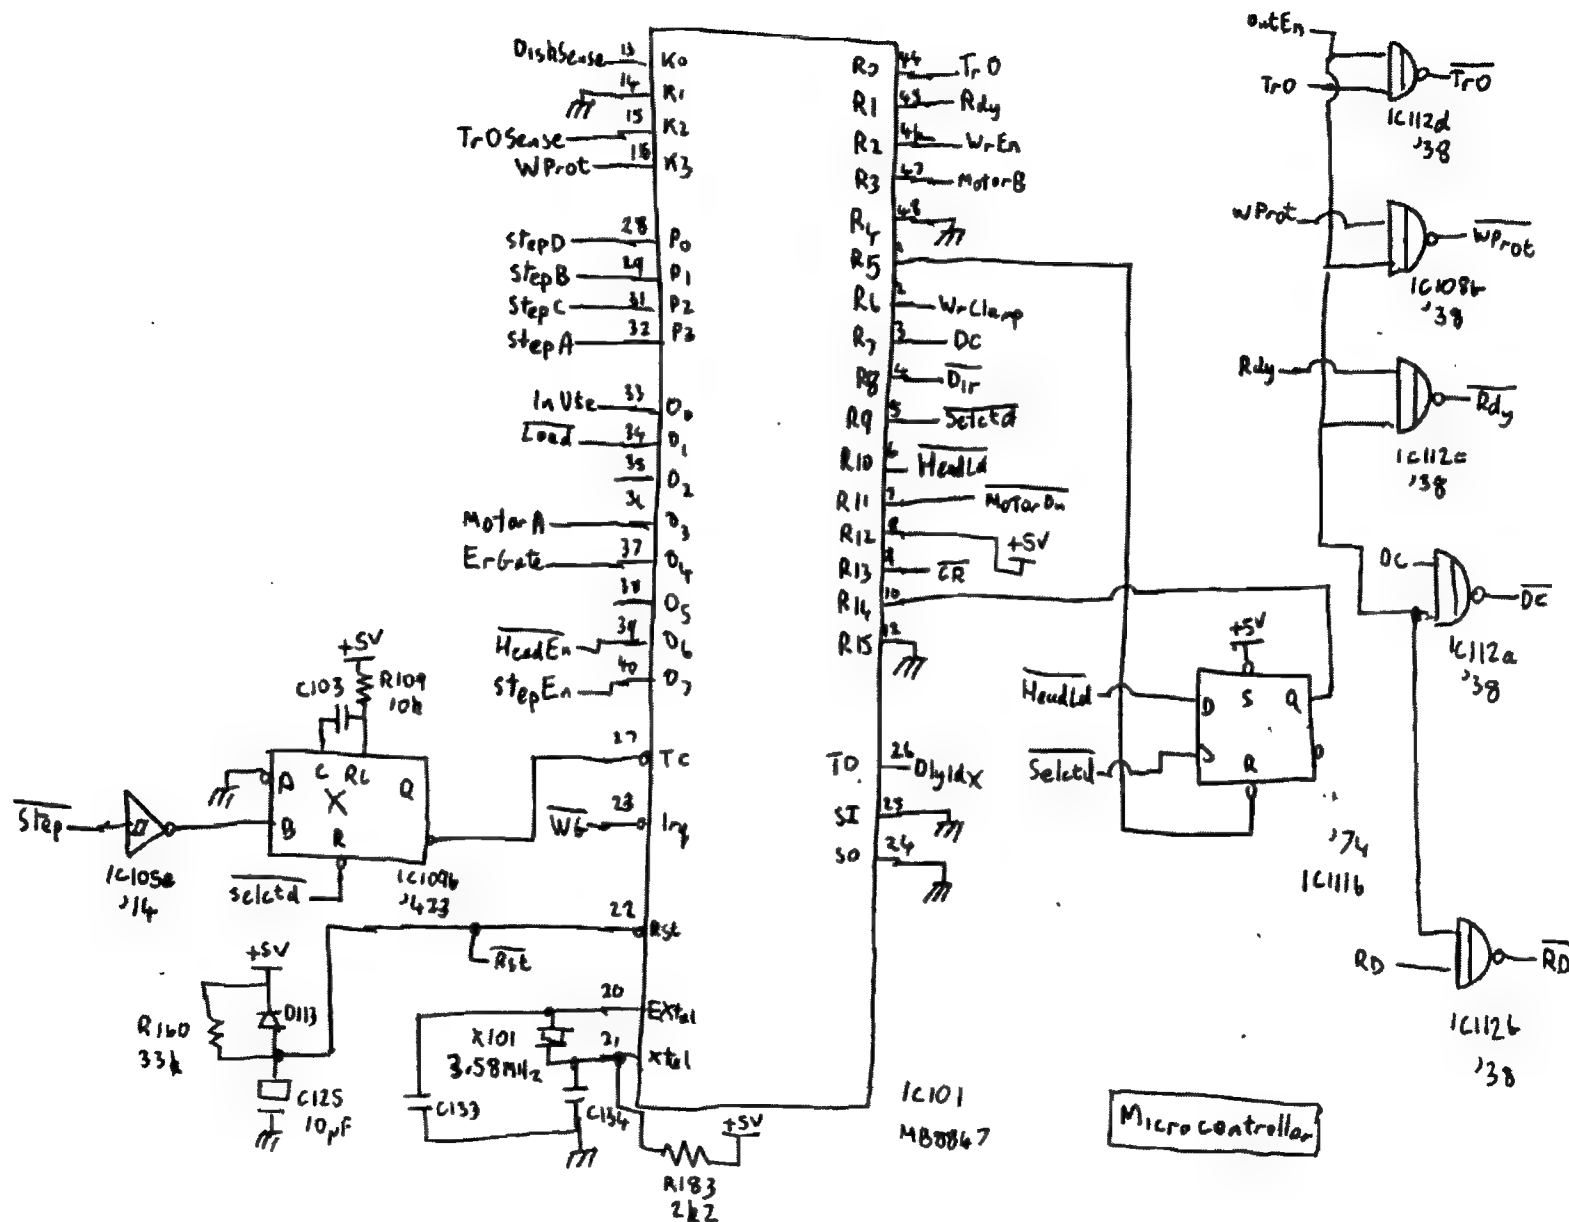 

 Sony Floppy Drive Logic Board FC9 sheet 2

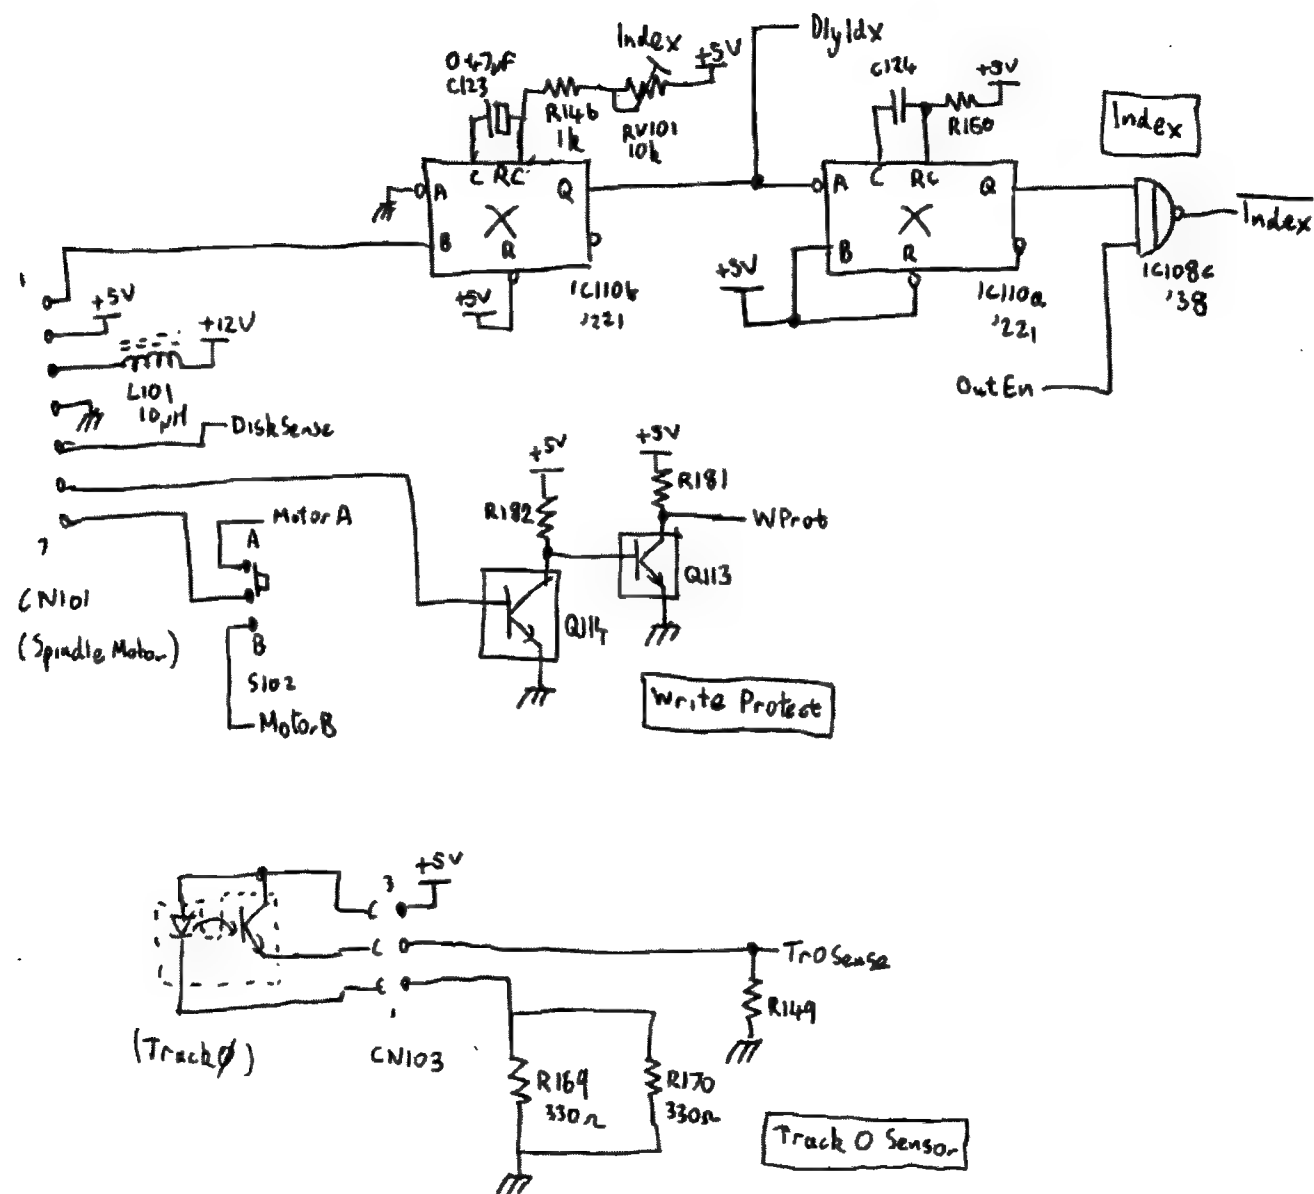

 
Sony Floppy Drive Logic Board FC9 Sheet (3)

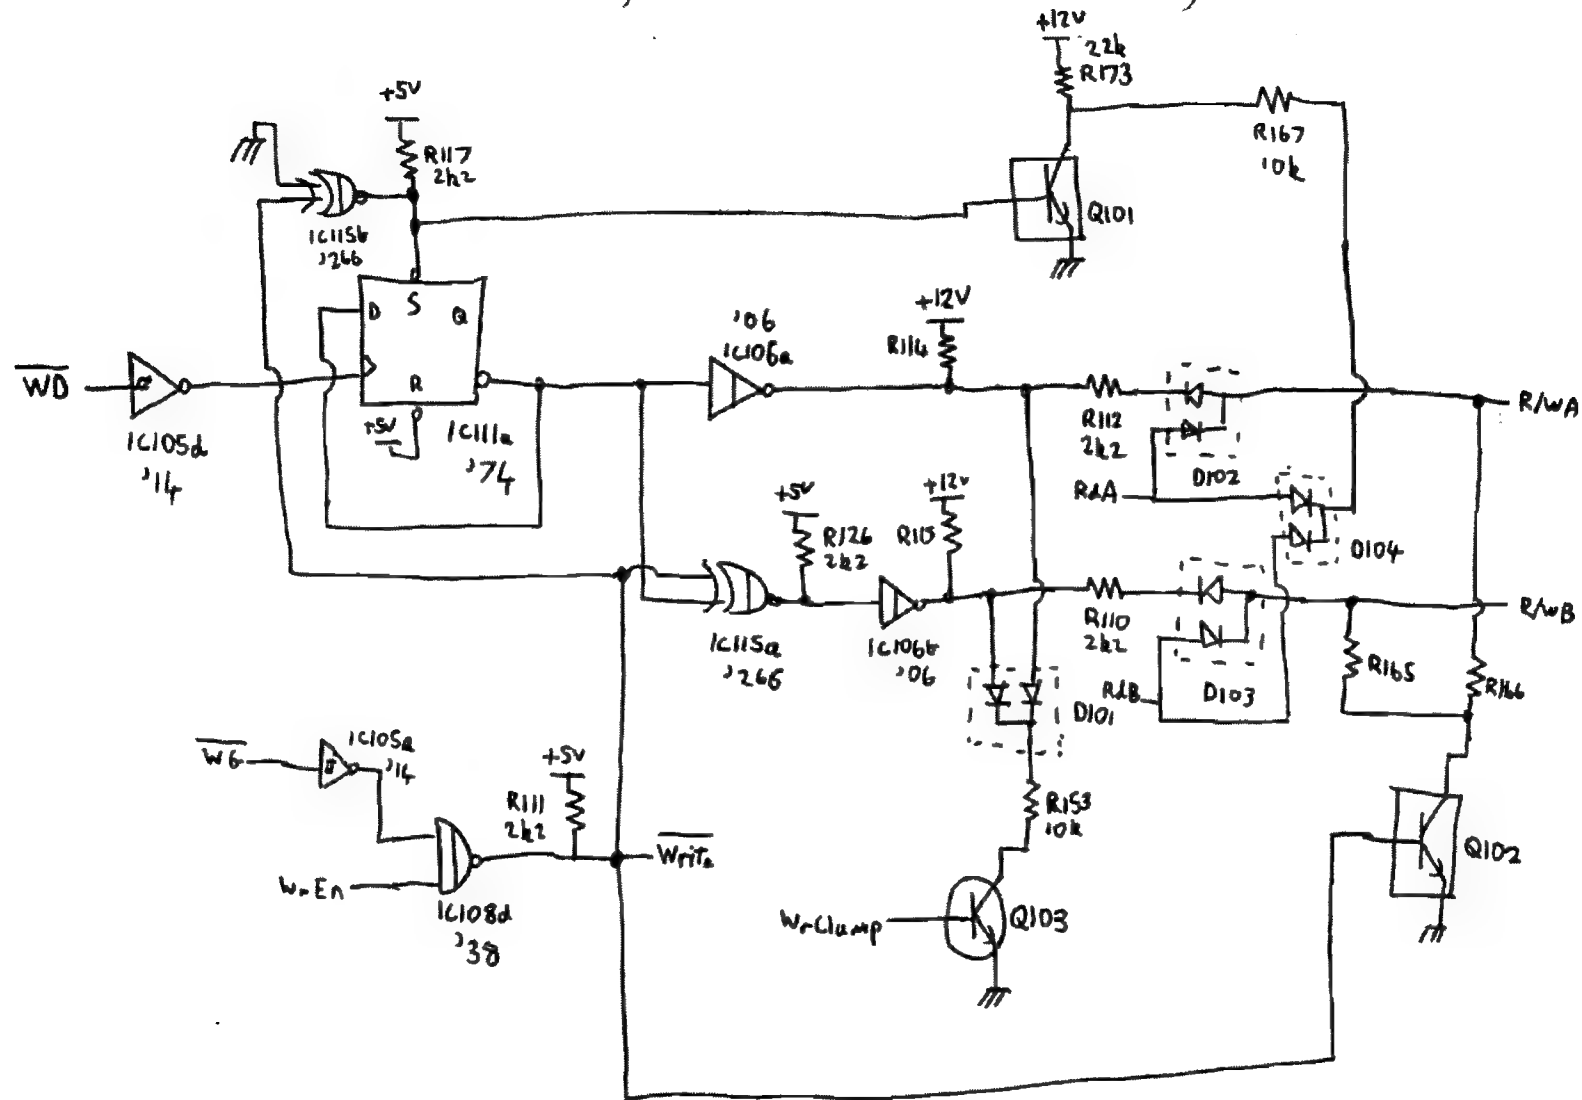


Write

- Erase
- R/WA
- R/WB
- Hd0
- Hd1

 
CN106
(Head)

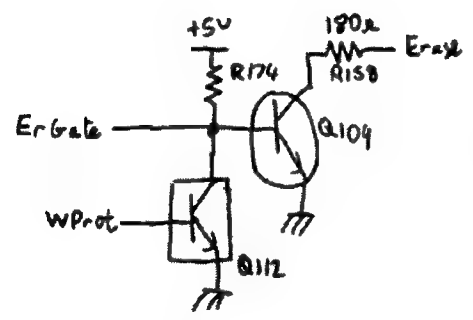


Erase

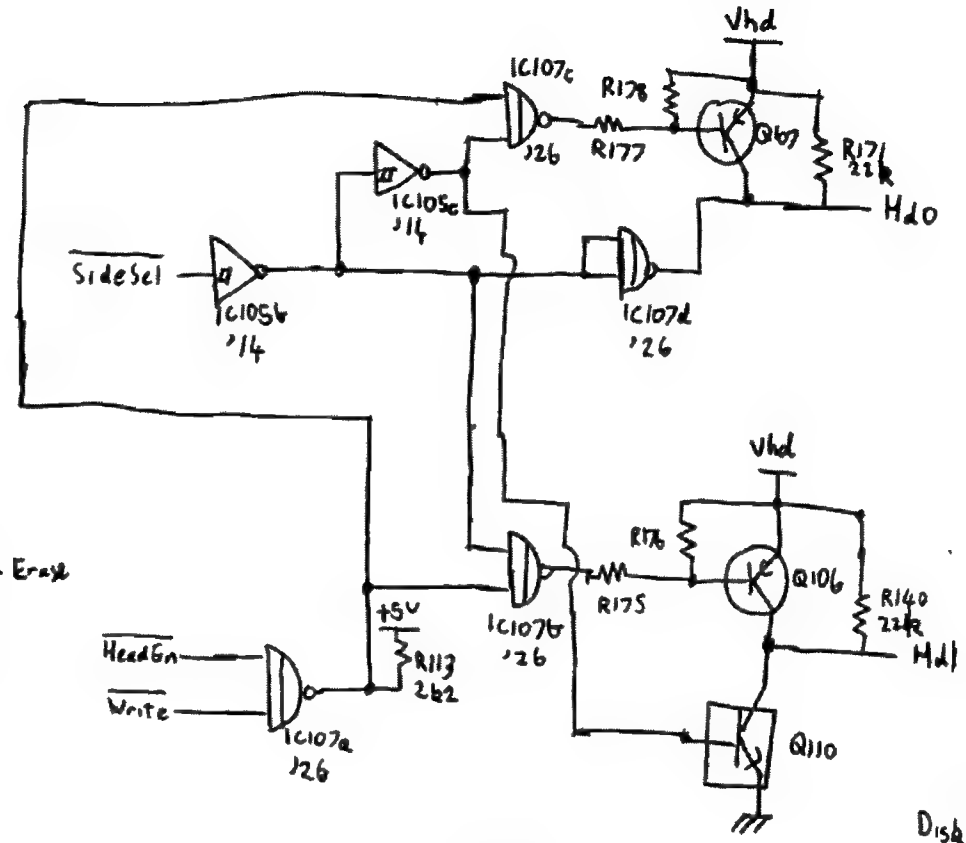 






Head Switch

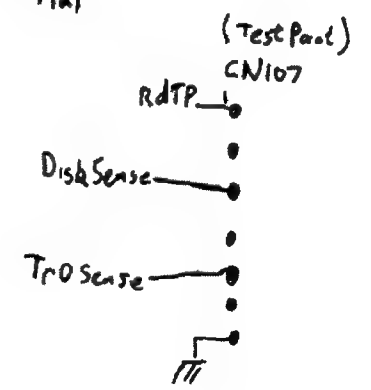 

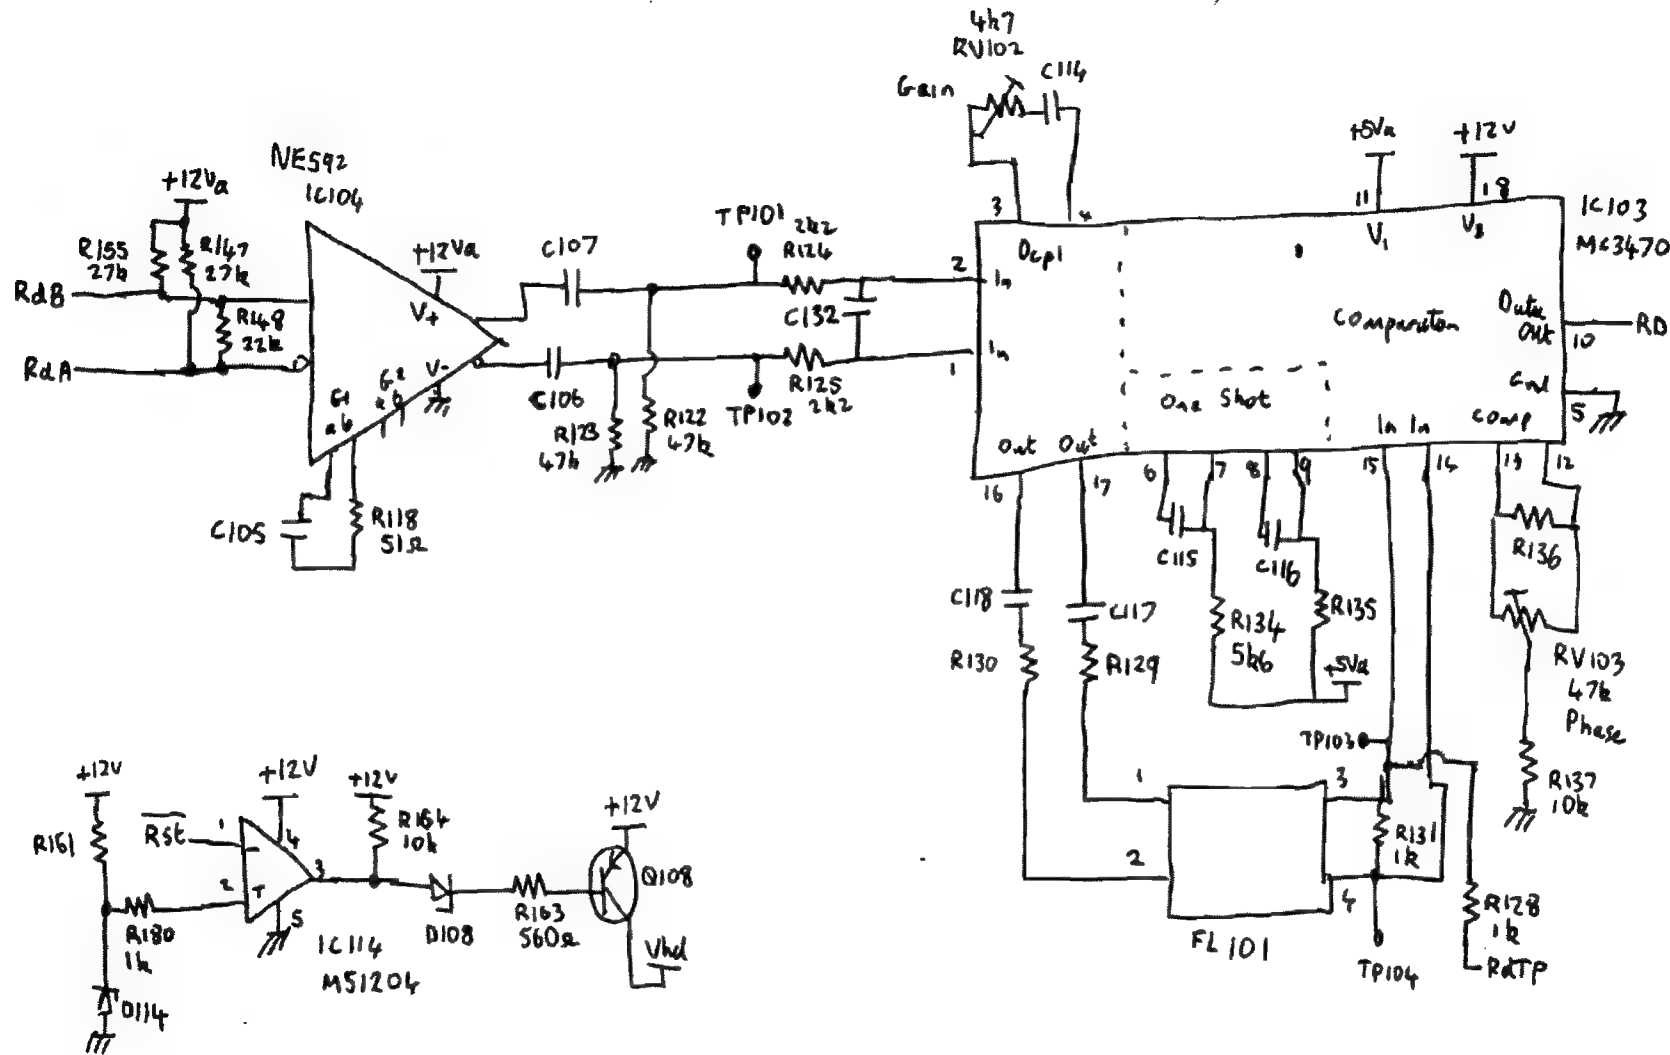 


Power OK

     Read

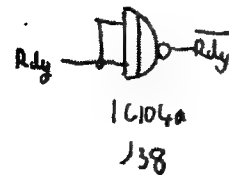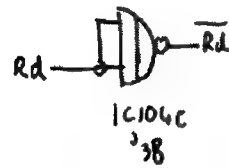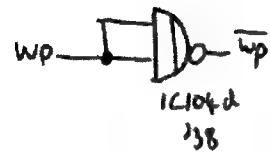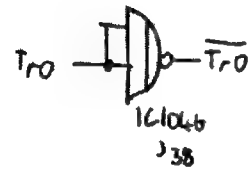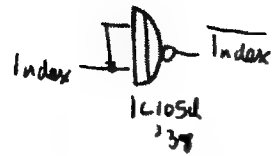





Interface Output

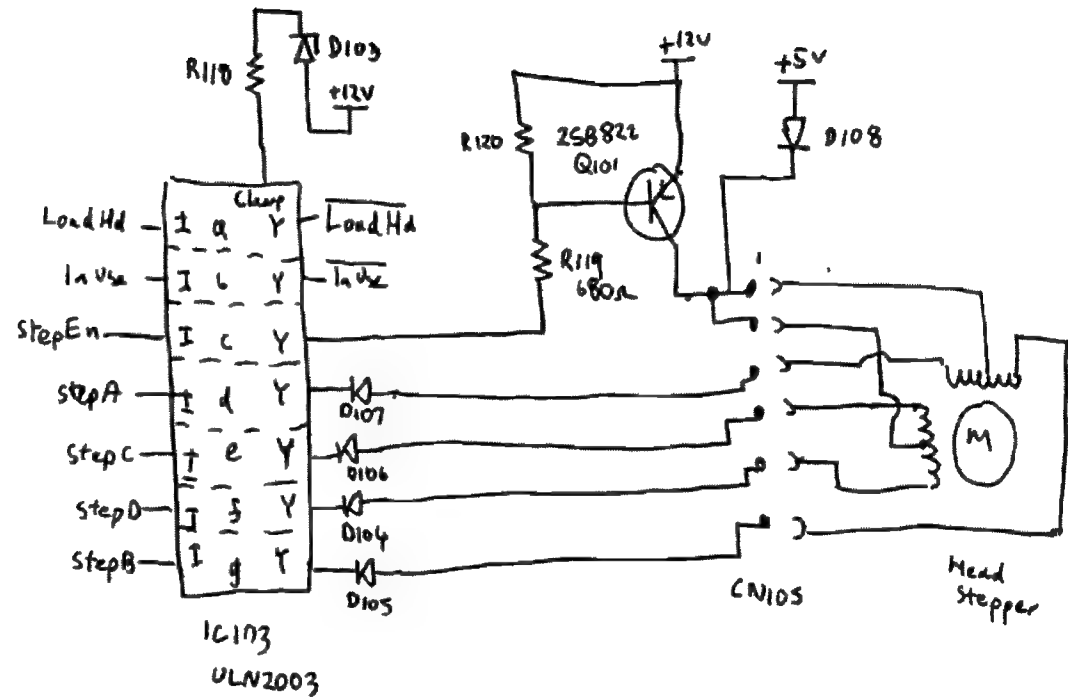 


Stepper Driver



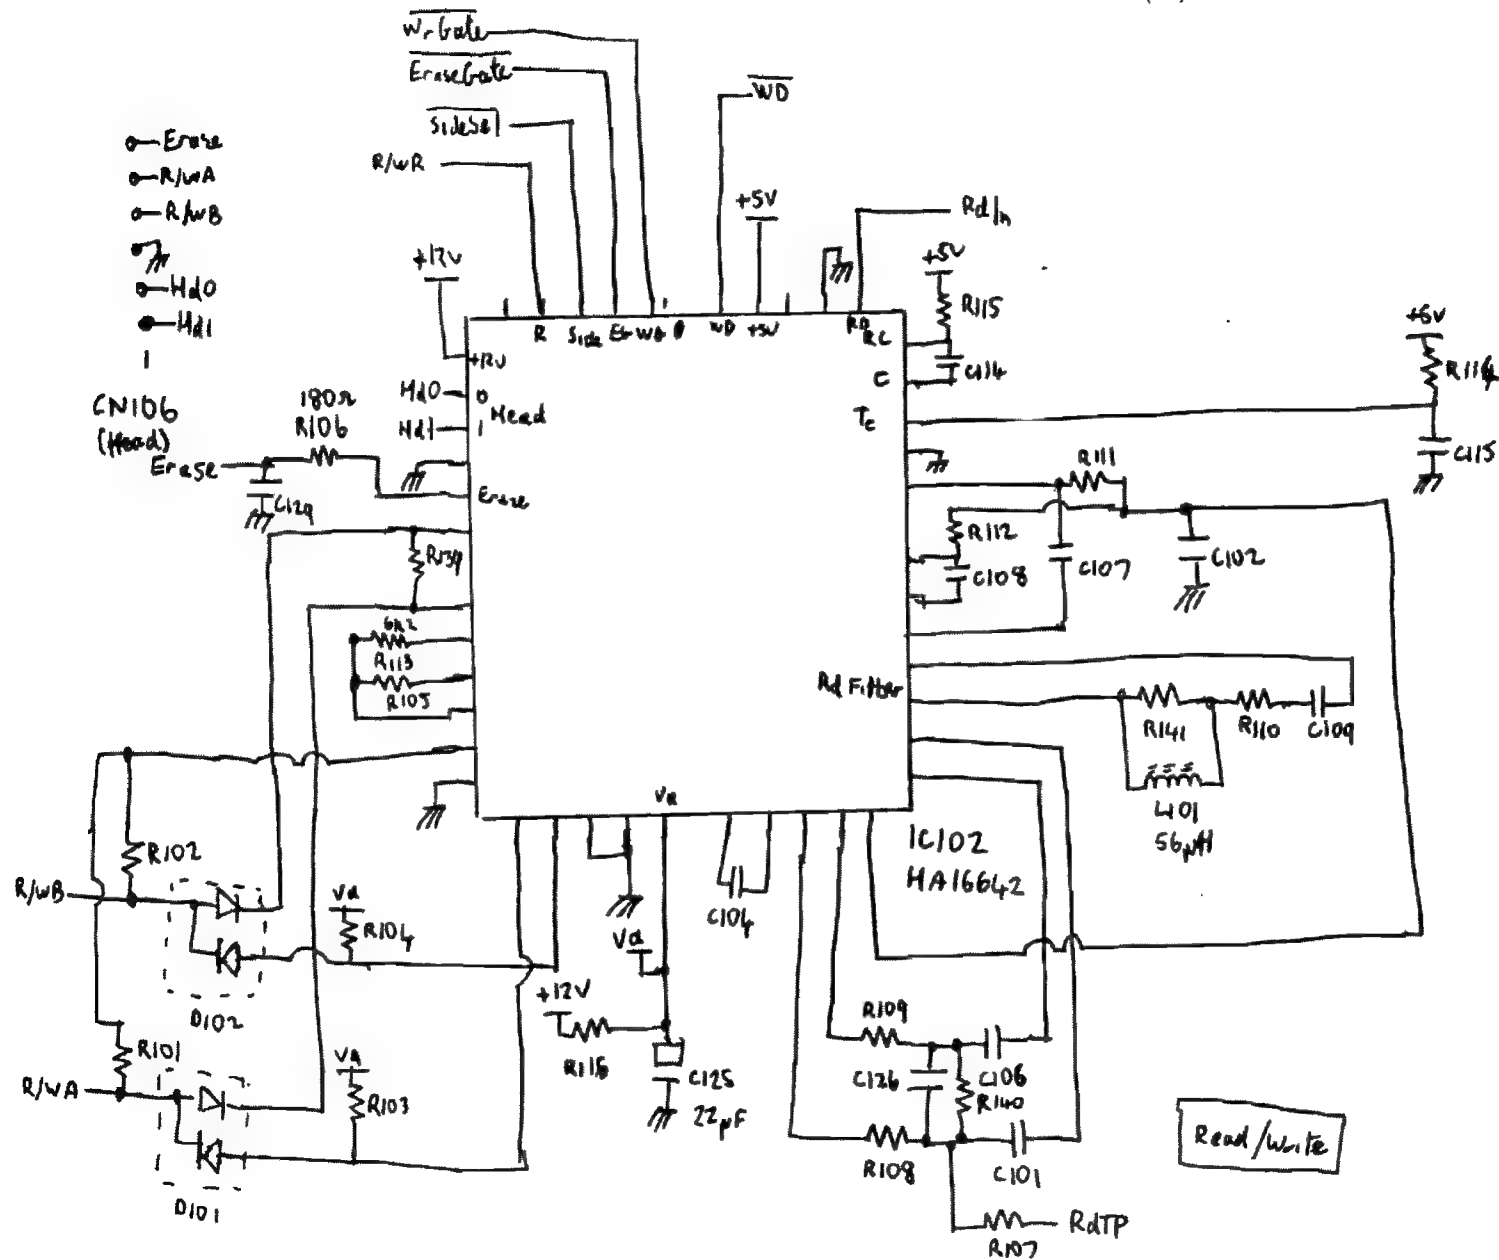 


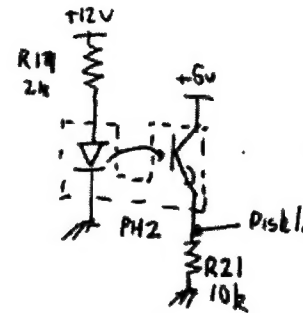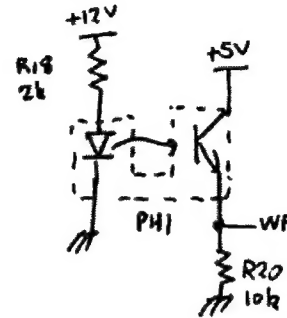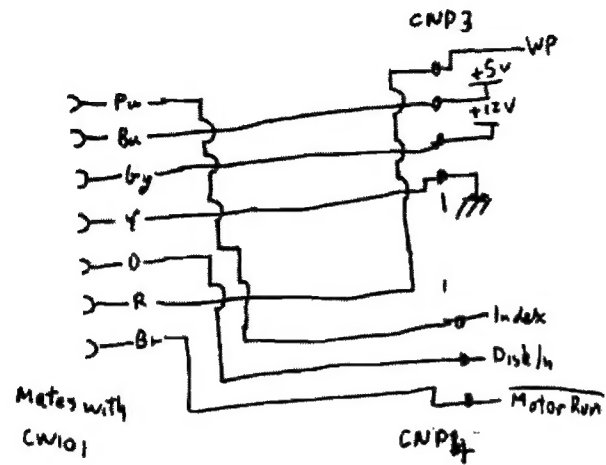   


Sensors

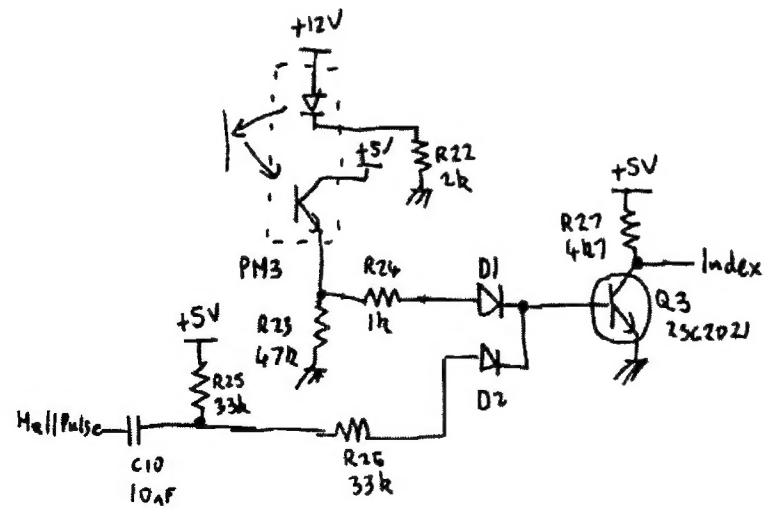 

Sony Floppy Drive Spindle Motor Sheet ①

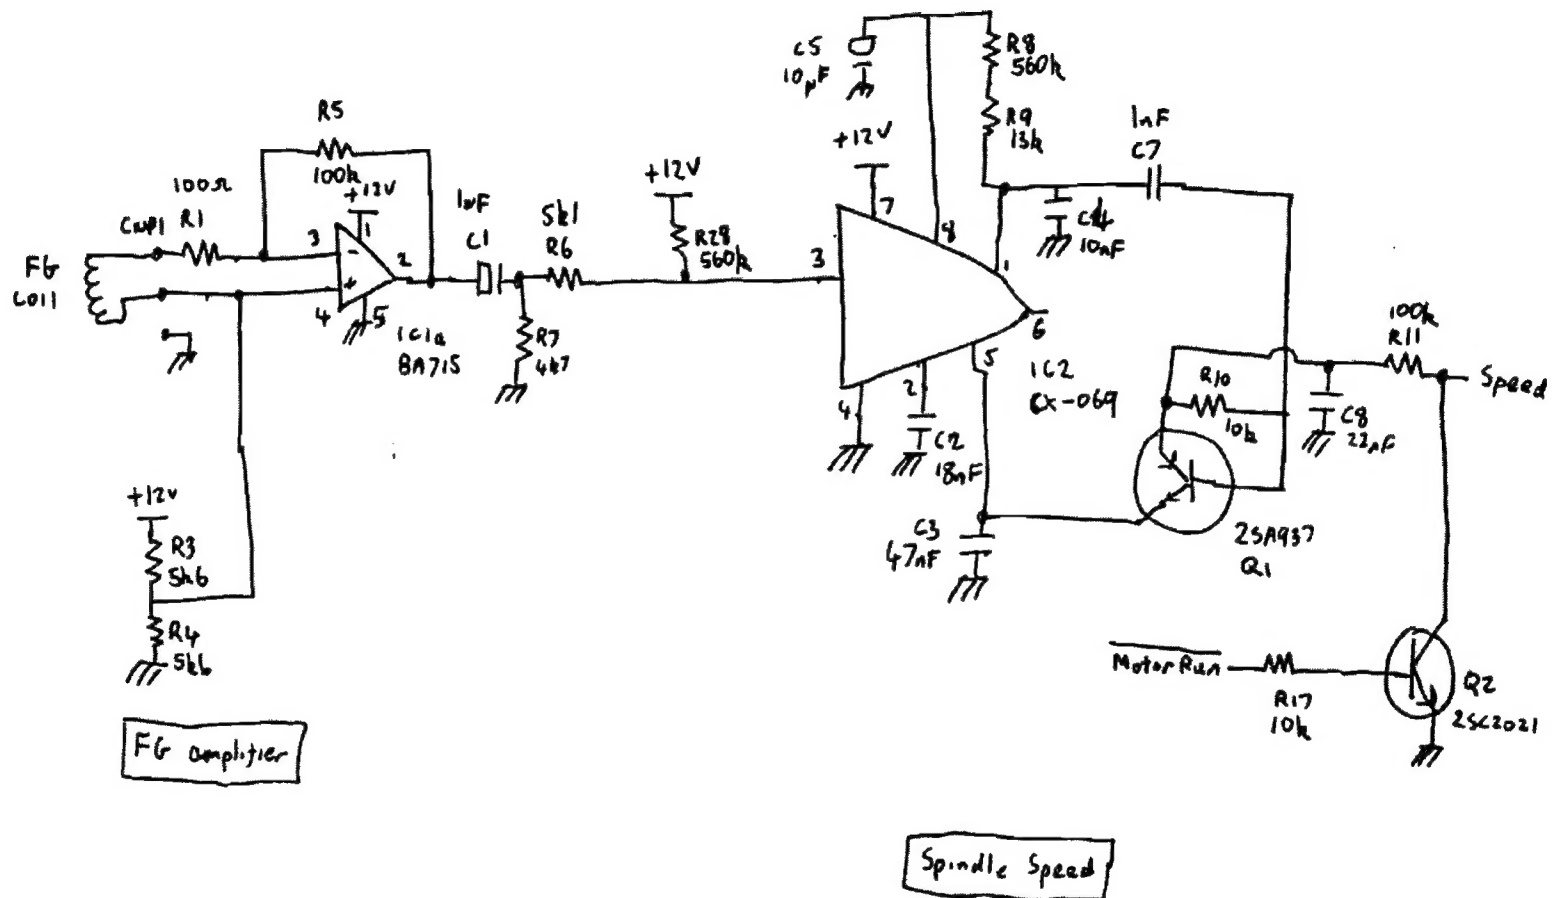 

 Sony Floppy Drive Spindle Motor sheet(2)

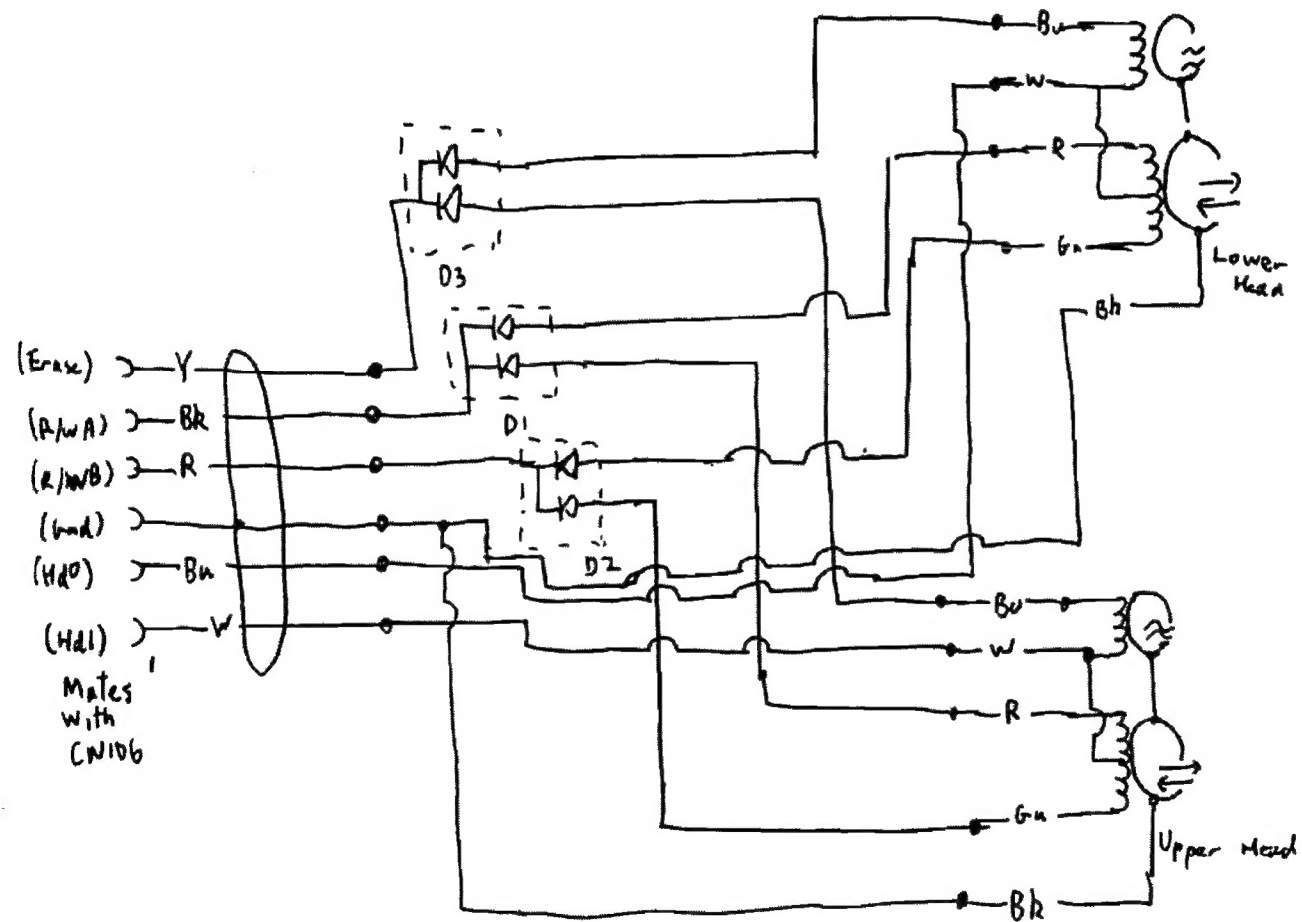

Sony Floppy Drive Double-Sided Head